


**RYOBI
GARAGE DOOR OPENER
MODEL NO. GD200
REPAIR SHEET**

FOR SERVICE CENTER REPAIR ONLY

RYOBI GARAGE DOOR OPENER – MODEL NO. GD200

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **GARAGE DOOR OPENER** or when ordering replacement parts.


FIGURE A

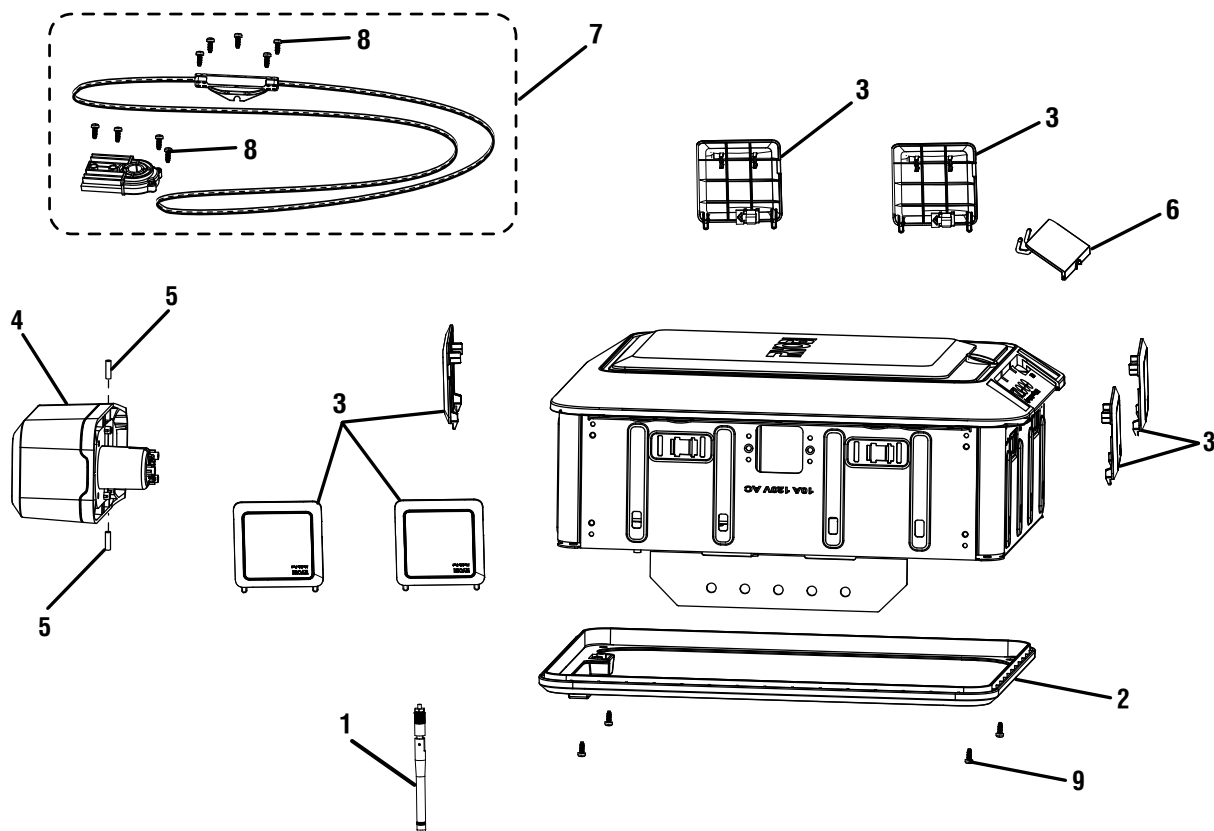

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	039841001070	Wifi Antenna.....	1
2	039841001007	Top Shroud	1
3	039841001008	Dust Cover	7
4	039841001004	Battery Cover.....	1
5	039841001037	Pin (2.5 x 20)	2
6	039841001001	Button Cover.....	1
7	039841001355	Belt and Pulley Assembly (Inc. Key No. 8).....	1
8	039841001111	Screw (M4 x 10 mm)	9
9	039841001030	Screw (M5 x 8 mm, Pan Hd.).....	4


FIGURE B

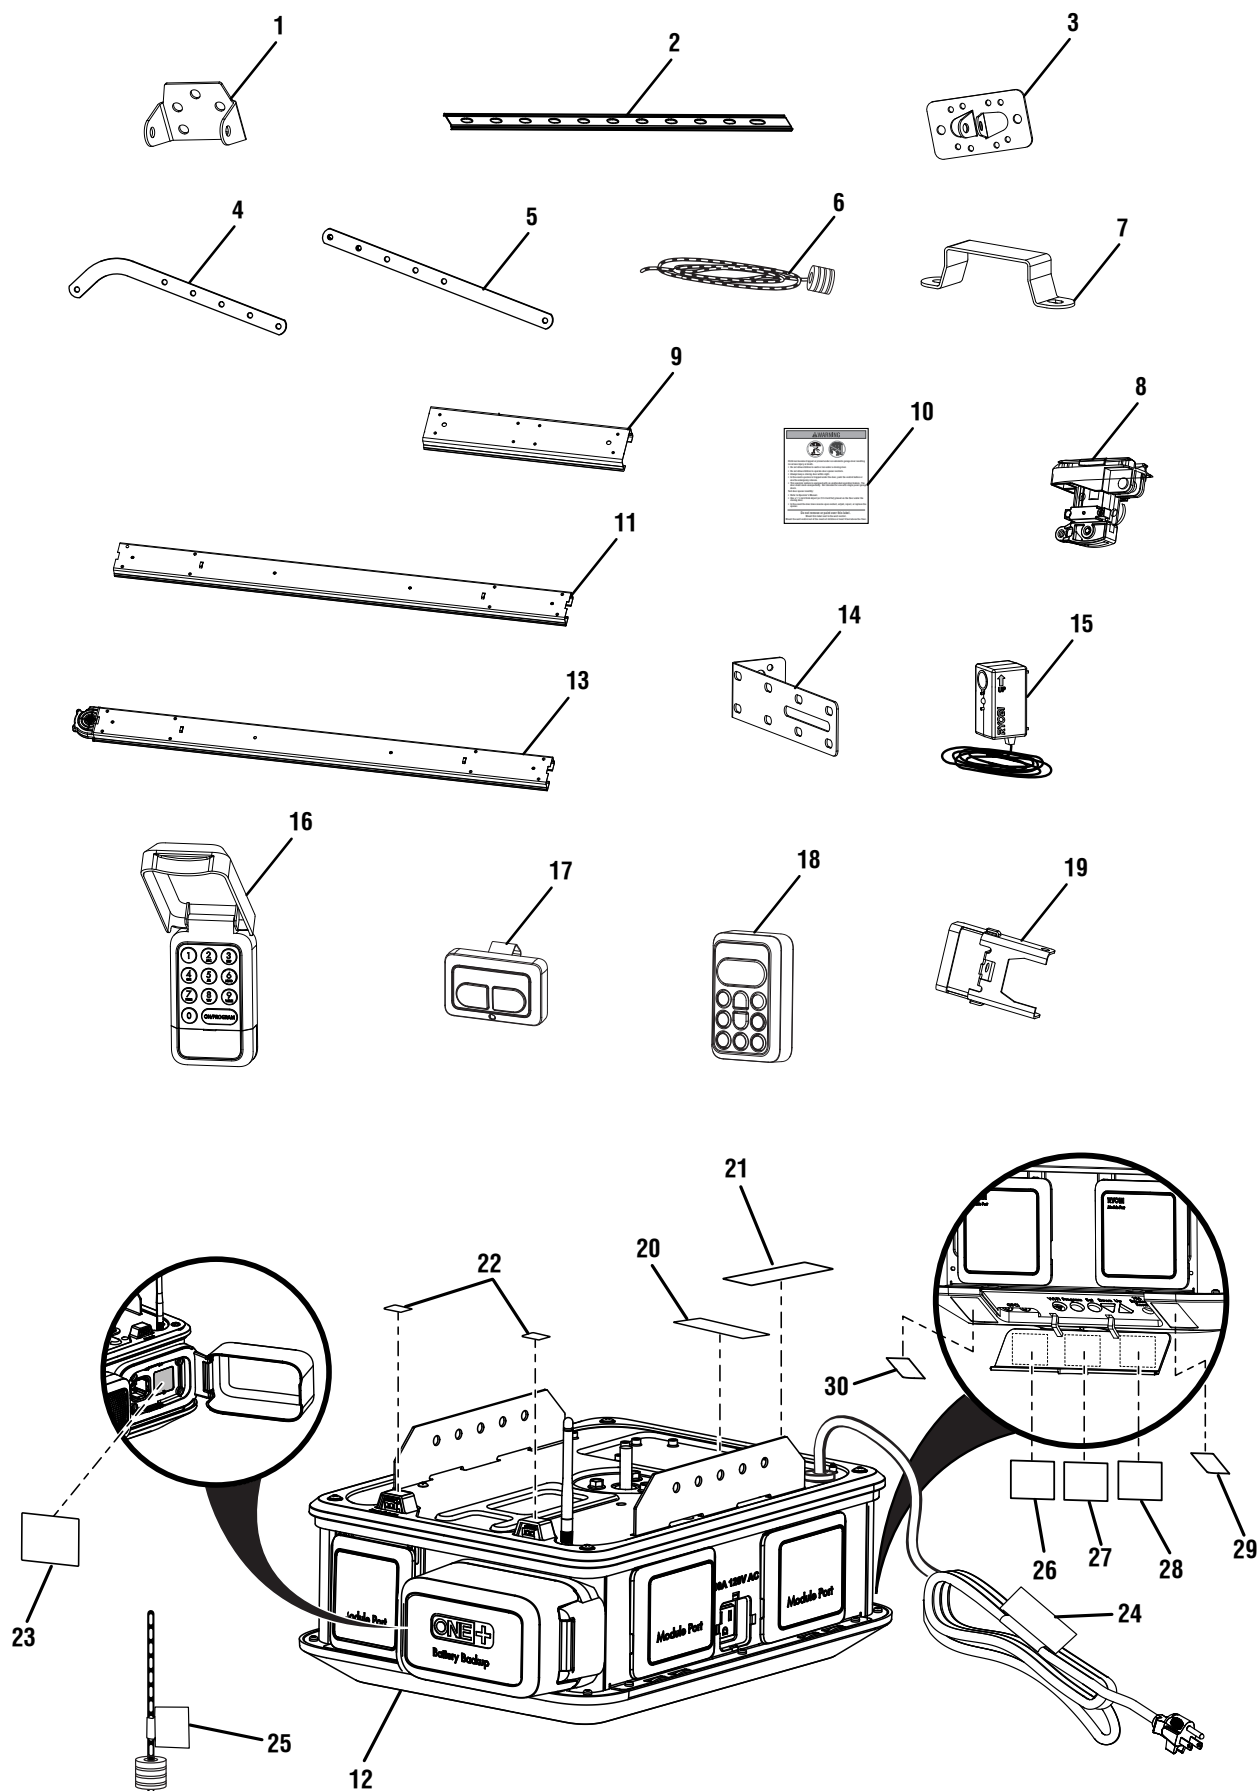

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	039841001166	Header Bracket.....	1
2	039841001164	Mounting Strap.....	2
3	039841001165	Door Bracket	1
4	039841001163	Curved Door Arm.....	1
5	039841001162	Straight Door Arm.....	1
6	039841001353	Emergency Release Rope Assembly (Inc. Key No. 25).	1
7	039841001178	Bracket	2
8	039841001352	Outer Trolley	1
9	039841001126	Sleeve	2
10	941120162	Entrapment Warning (English)	1
	941120172	Entrapment Warning (French).....	1
	941120173	Entrapment Warning (Spanish).....	1
11	039841001128	Rail.....	2
12	039841001301	GD200 Base Unit (Inc. Key Nos. 20-30)	1
13	039841001351	End Rail w/Belt and Wheel Assembly ...	1
14	019687001102	Sensor Bracket.....	2
15	019687001101	Safety Sensor (Set of 2).....	1
16	019688001701	Outdoor Keypad	1
17	019686001701	Car Remote	2
18	019696001701	Indoor Keypad	1
19	039841001116	Front Brace.....	1
20	941001273	Notice Label	1
21	941120170	Wiring Warning Label	1
22	941001272	Terminal Label.....	2
23	941488190	Data Label	1
24	941120168	Cord Wrap Label	1
25	941001271	Notice Emergency Label	1
26	941120161	Danger Entrapment Label (English).....	1
27	941120171	Danger Entrapment Label (French/Spanish).....	1
28	941001248	Instruction Label (English)	1
	941001250	Instruction Label (French).....	1
	941001251	Instruction Label (Spanish).....	1
29	941120166	Left Icon Label.....	1
30	941120167	Right Icon Label.....	1
Not Shown:			
	039841001354	Main Hardware Kit	
	019687001103	Sensor Hardware (GDA200)	
	019696001010	Indoor Keypad Hardware (GDA400)	
	019688001010	Outdoor Keypad Hardware (GDA300)	
	039841001303	Rail Assembly (7 ft., GD200)	
	991000698	Operator's Manual	

FIGURE B

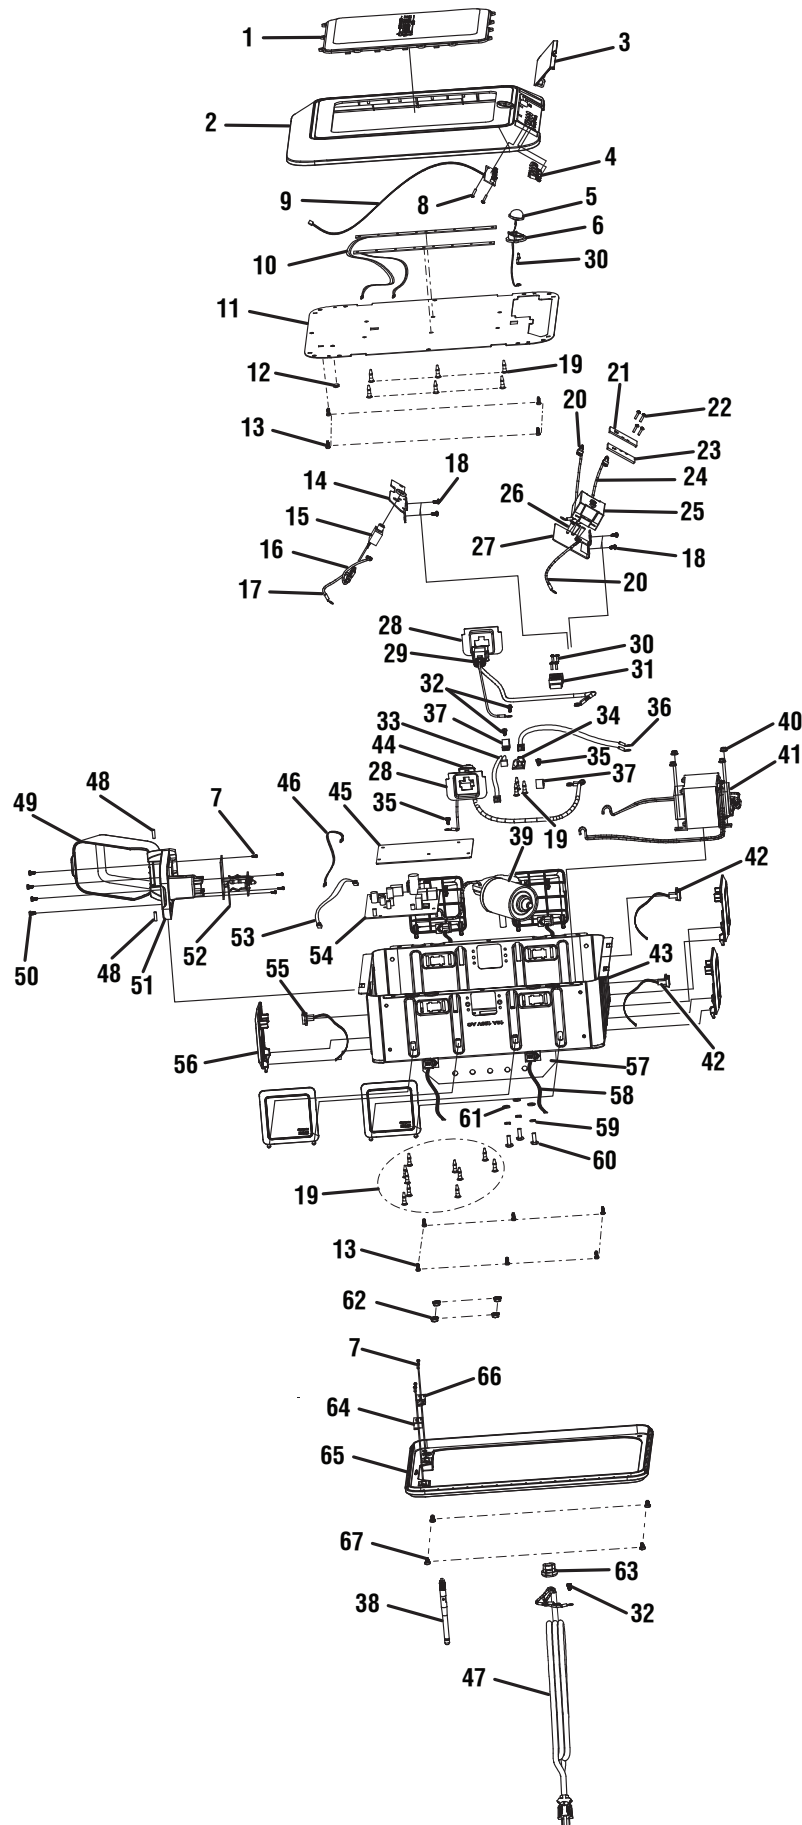

RYOBI GARAGE DOOR OPENER – MODEL NO. GD200

The model number will be found on a label attached to the housing. Always mention the model number in all correspondence regarding your **GARAGE DOOR OPENER** or when ordering replacement parts.

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
1	039841001005	Light Cover	1
2	039841001006	Bottom Shroud	1
3	039841001001	Button Cover.....	1
4	039841001002	Button	1
5	039841001055	Motion Sensor w/35 mm wires	1
6	039841001020	Motion Sensor Bracket	1
7	039841001033	Screw (M3 x 8 mm, Pan Hd.)	8
8	039841001035	Screw (M3 x 10 mm, Flat Hd.)	2
9	039841001052	Control Board	1
10	039841001053	LED Board.....	2
11	039841001013	Bottom Plate	1
12	039841001041	Grommet.....	1
13	039841001028	Screw (M4 x 8 mm, Plastic Torx. Pan Hd.)	10
14	039841001018	Breaker Bracket	1
15	039841001061	10 A Breaker	1
16	039841001065	Connection Wire, 25 cm, GFCI Black	1
17	039841001076	Connection Wire, 25 cm, Terminal Black.....	1
18	039841001027	Screw (M4 x 9 mm, Flat Hd.)	4
19	039841001066	Separation Pillar, 10 cm	19
20	039841001064	Connection Wire, 18 cm, Terminal White.....	2
21	039841001040	GFCI Insulator, Right.....	1
22	039841001036	Screw (M3 x 16 mm, Flat Hd.)	4
23	039841001039	GFCI Insulator, Left	1
24	039841001063	Connection Wire, 18 cm, Terminal Black.....	1
25	039841001062	GFCI.....	1
26	039841001077	Expansion Tube (Dia. 5 x 20 cm)	4
27	039841001017	GFCI Bracket	1
28	039841001016	Socket Bracket	2
29	039841001075	AC Socket.....	1
30	039841001032	Screw (M3 x 12 mm, Pan Hd.)	6
31	039841001060	Terminal Block	1
32	039841001031	Screw (M4 x 8 mm, Hex Hd.).....	3
33	039841001089	18 AWG Wire 14 cm, 2 pcs.....	1
34	039841001088	Filter Board	1
35	039841001025	Screw (M4 x 8 mm, Pan Hd.)	2
36	039841001072	18 AWG 8.5 cm, 2 pcs.....	1

RYOBI GARAGE DOOR OPENER – MODEL NO. GD200

PARTS LIST

KEY NO.	PART NUMBER	DESCRIPTION	QTY
37	039841001034	P-Clip	2
38	039841001070	WIFI Antenna	1
39	039841001019	6 Nm Motor DC 18V	1
40	039841001021	Nut (M5)	4
41	039841001056	Transformer.....	1
42	039841001079	CIT Connector, Wire Assy (400 mm).....	2
43	039841001015	Main Body.....	1
44	039841001058	AC Socket.....	1
45	039841001068	WIFI Board	1
46	039841001073	Connect Wire (GDO 4 Pin)	1
47	039841001057	Power Cord.....	1
48	039841001037	Dowel	2
49	039841001004	Battery Cover	1
50	039841001026	Screw (M4 x 8 mm, Torx. Pan Hd.)	4
51	039841001003	Connector Foot.....	1
52	039841001074	Charger Board	1
53	039841001080	18 AWG Wire 20 cm, 2 pcs.....	1
54	039841001051	GDO Main Board	1
55	039841001071	CIT Connector, Wire Assy (200 mm).....	2
56	039841001008	Anti-Dust Cover	1
57	039841001014	Main Body Bracket	1
58	039841001078	CIT Connector, Wire Assy (300 mm).....	3
59	039841001024	Washer, Lock (M6)	3
60	039841001022	Screw (M6 x 16 mm)	3
61	039841001023	Washer (M6).....	3
62	039841001174	Nut (M6)	4
63	039841001059	Cord Strain Relief.....	1
64	039841001054	Adaptor Board, Safety Sensors	1
65	039841001007	Top Shroud	1
66	039841001069	Adaptor Board, Indoor Keypad.....	1
67	039841001030	Screw (M5 x 8, Torx. Pan Hd.)	4
68	039841001070	WIFI Antenna	1