


REPAIR SHEET

BRAND	RYOBI	DESCRIPTION
MODEL NO.	P262	

18 Volt Brushless 4-Mode 1/2 in. Impact Wrench

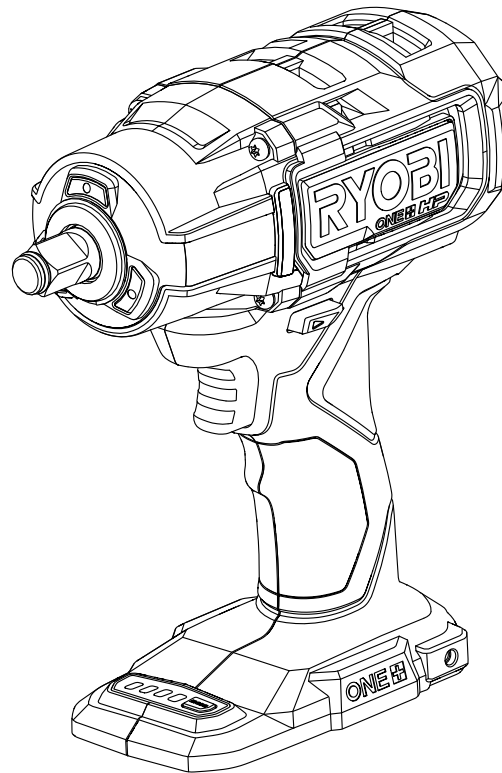


TTI CONSUMER POWER TOOLS, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

11-3-23 (Rev:04)


The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

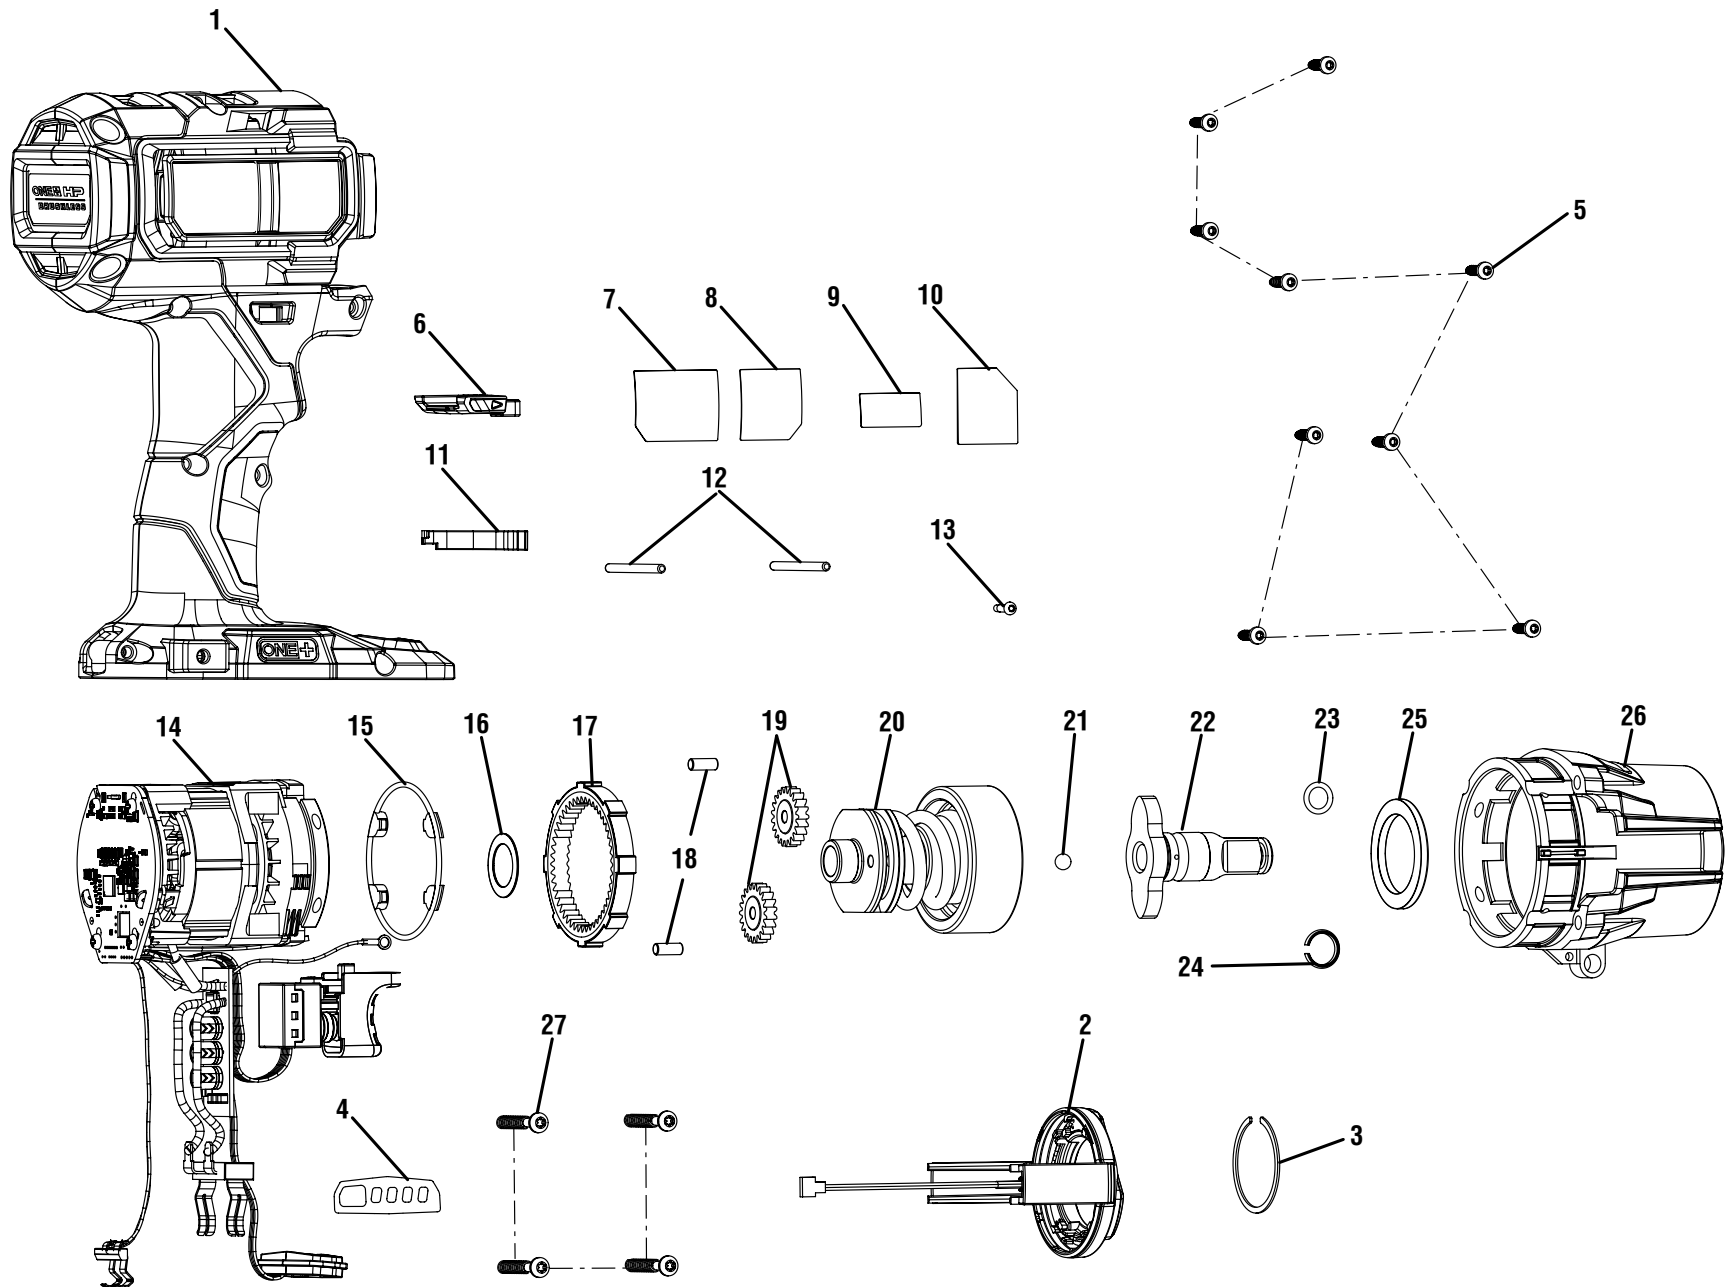

**P262****PARTS LIST**

KEY NO.	PART NO.	DESCRIPTION	QTY.
1-CN	204929002	Housing Assembly (Inc. Key Nos. 7-10)	1
1-VN	204929003	Housing Assembly (Inc. Key Nos. 7-10)	1
2-CN	292101001	LED Asssembly	1
2-VN	292101002	LED Asssembly	1
3	659474001	Snap Ring	1
4	941120600	Mode Selector Label	1
5	660031017	Screw (M3.5 x 16 mm)	9
6	539331001	Forward/Reverse Button	1
7-CN	941123090	Data Icon Label	1
7-VN	941123646	Data Icon Label	1
8	941120637	Data Serialization Label	1
9	941120716	Hot Surface Label	1
10	941120665	Battery Statement Label	1
11	541461001	Wire Cover	1
12-CN	674151001	Pin	2
12-VN	674151002	Pin	2
13	661047003	Screw (M2.6 x 10 mm)	1
14-CN	206929003 or 206929011	Motor, Switch and Circuit Board Assembly (Inc. Key No. 4)	1
14-VN	206929008 or 206929012	Motor, Switch and Circuit Board Assembly (Inc. Key No. 4)	1

KEY NO.	PART NO.	DESCRIPTION	QTY.
15	565462001	Rubber Oil Seal	1
16	680335148	Washer	1
17	610449062	Ring Gear	1
18	690251003	Planet Gear Pin	2
19-CN	610448049	Planet Gear	2
19-VN	610448076	Planet Gear	2
20	206929005	Hammer Assembly	1
21	680595003	Ball	1
22	671562198	Anvil	1
23	570698001	O-Ring	1
24	691983001	Friction Ring	1
25	680335162	Flat Washer	1
26	206929004	Gear Case Assembly	1
27	662483002	Screw (M4.5 x 28 mm)	4
	Not Shown:		
	998000373	Operator's Manual (961153446)	

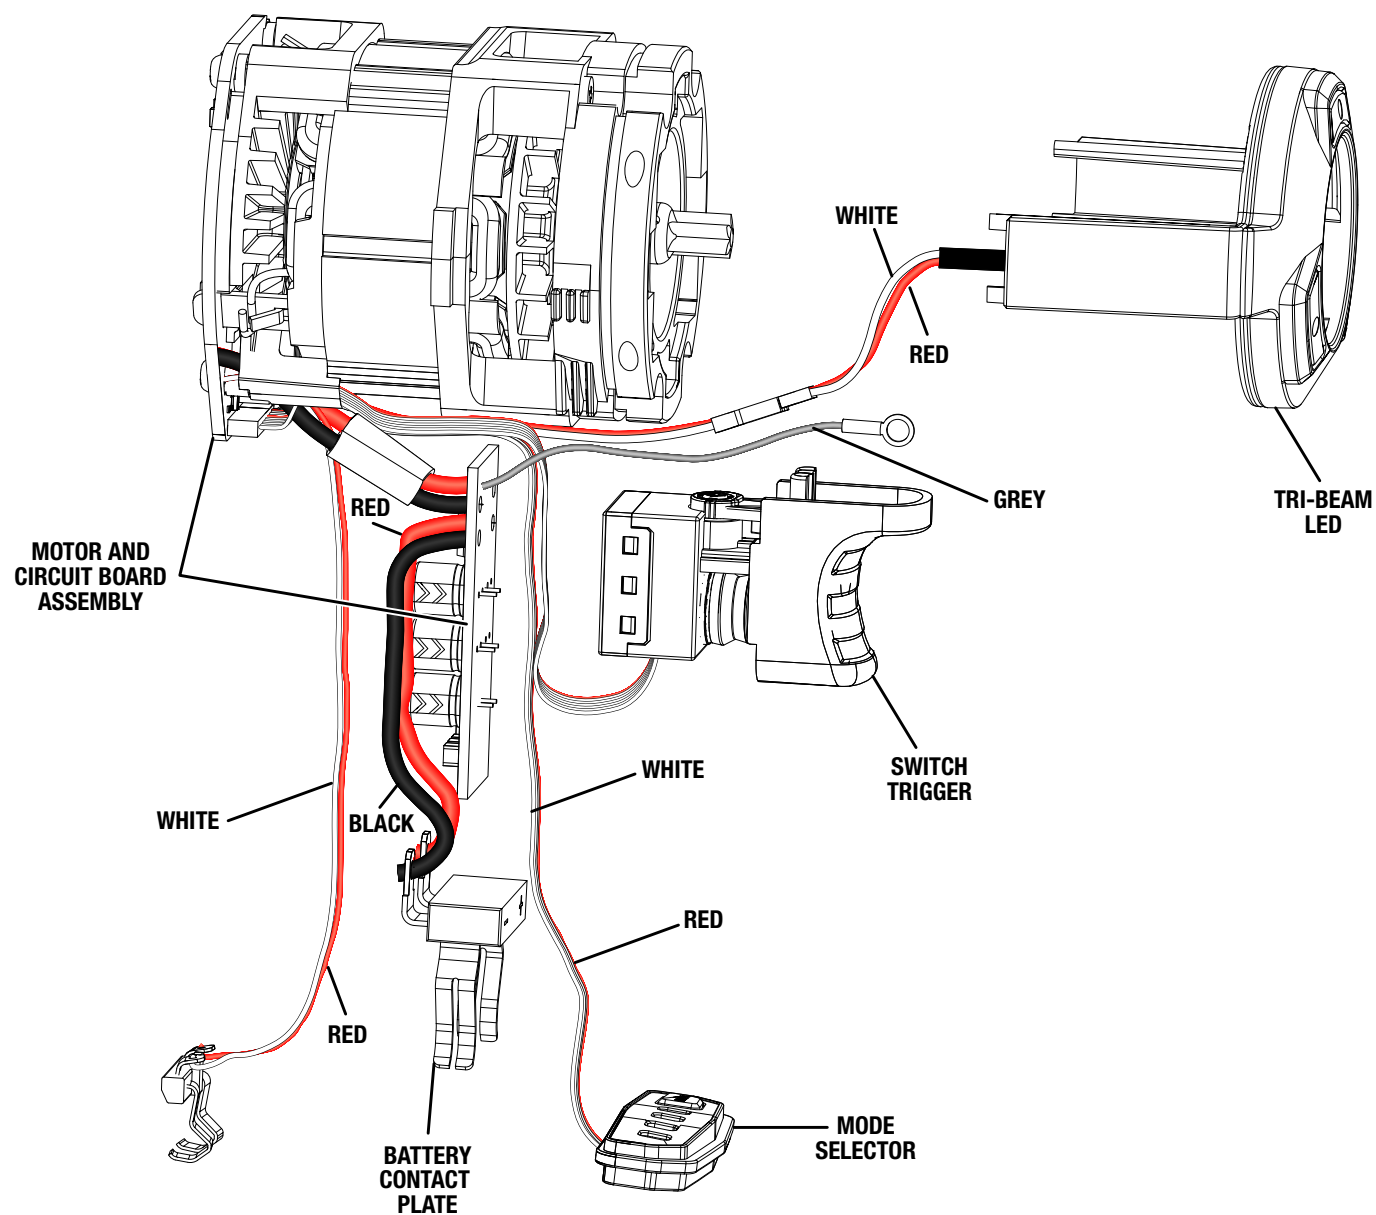

WIRING DIAGRAM