


REPAIR SHEET

BRAND RYOBI		DESCRIPTION 14 in. Dethatcher
MODEL NO. P2704	MFG. NO. 108953001	

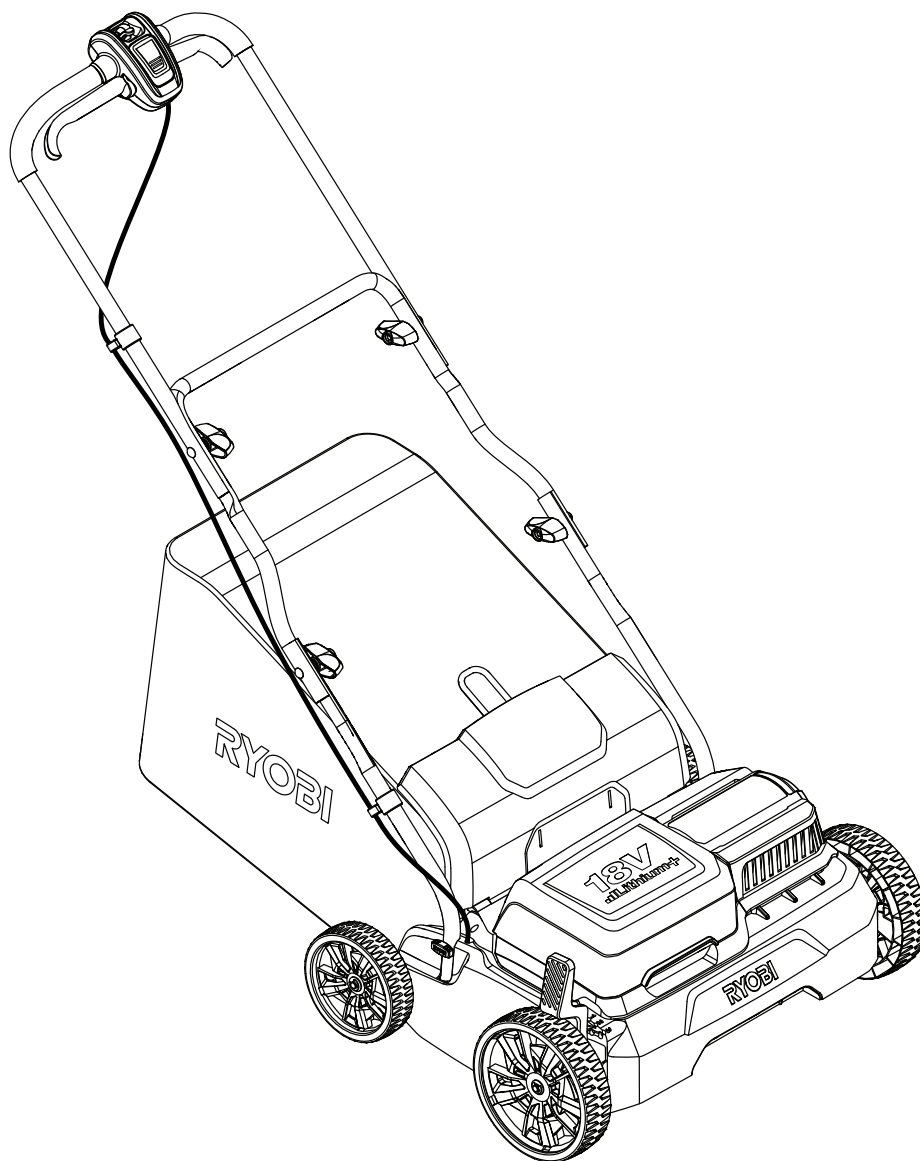


TTI OUTDOOR POWER EQUIPMENT, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

2-11-22 (Rev:01)


The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

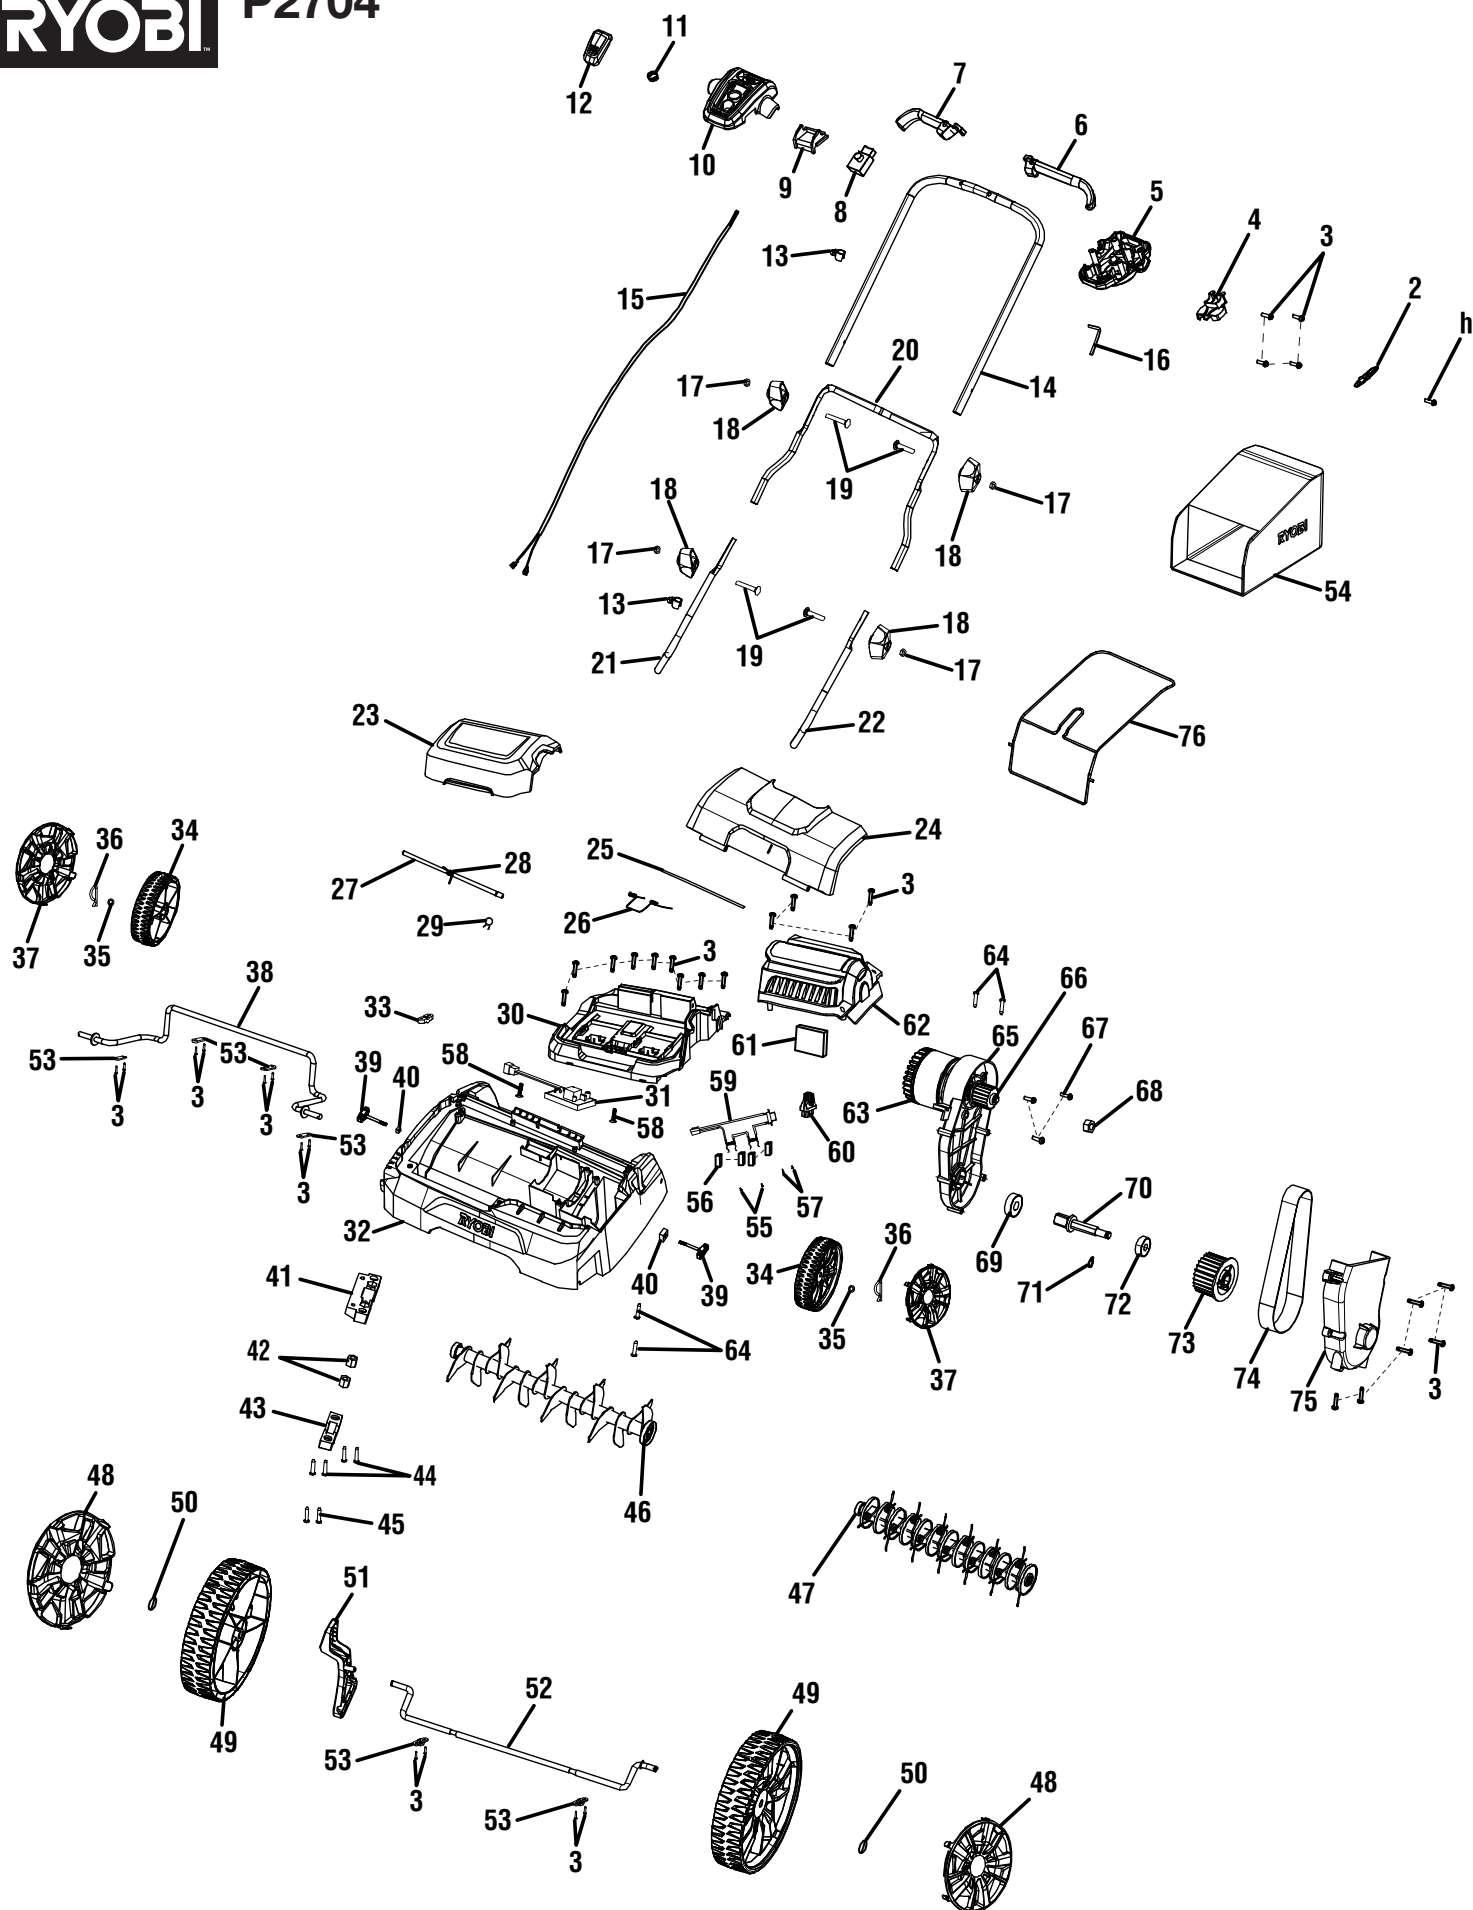

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	099228001019	Screw (ST4.2 x 12 mm)	1
2	099228001071	Plug Cover	1
3	099228001020	Screw (ST4.2 x 15 mm)	35
4	099228001072	Switch Middle Plate	1
5	099228001073	Switch Bottom Cover	1
6	099228001075	Right Trigger	1
7	099228001076	Left Trigger	1
8	099228001077	Electronic Switch	1
9	099228001078	Waterproof Cover	1
10	099228001074	Switch Top Cover	1
11	099228001079	Switch Spring	1
12	099228001080	Lock-Out	1
13	099228001081	Wire Clamp	2
14	099228001021	Top Handle	1
15	099228001022	Wire Component	1
16	099228001023	Wrench (45#)	1
17	099228001024	Nut (M6)	4
18	099228001025	Rotary Knob	4
19	099228001026	Screw (M6)	4
20	099228001027	Middle Handle	1
21	099228001028	Right Bottom Handle	1
22	099228001029	Left Bottom Handle	1
23	099228001005	Battery Cover	1
24	099228001006	Rear Door	1
25	099228001030	Rear Door Axle	1
26	099228001031	Rear Door Spring	1
27	099228001032	Battery Cover Axle	1
28	099228001033	Battery Cover Spring	1
29	099228001034	Spring Ring	1
30	099228001002	Top Cover	1
31	099228001035	Circuit Board Assembly	1
32	099253001006	Deck	1
33	099228001036	Wire Plate	1
34	099228001082	Front Wheel	2
35	099749024033	Plate Washer	2
36	099749024060	Bufferfly Pin	2
37	099228001083	Front Wheel Cover	2
38	099253001007	Front Wheel Axle	1
39	099228001084	Rotary Knob	2


KEY NO.	PART NO.	DESCRIPTION	QTY.
40	099228001040	Nut (M5)	2
41	099228001012	Press Blade Shaft Base	1
42	099228001041	Screw (M6 x 9.2 mm)	2
43	099228001013	Press Blade Shaft Cover	1
44	099228001042	Screw (ST4.2 x 1.8 mm)	4
45	099228001043	Screw (M6 x 20 mm)	2
46	099228001044	Dethatcher Blade	1
47	099253001005	Aerator Roller	1
48	099228001085	Rear Wheel Cover	2
49	099228001086	Rear Wheel	2
50	099288001037	Bearing Holder	2
51	099228001007	Height Adjustment Lever	1
52	099228001045	Rear Wheel Axle	1
53	099228001087	Press Plate	6
54	099228001064	Bag	1
55	099228001020	Screw (ST4.2 x 15 mm)	2
56	099228001048	Rubber Pad	4
57	099228001049	Screw (ST3 x 12 mm)	2
58	099228001050	Screw (ST4 x 12.5 mm)	2
59	099228001051	Wiring Component	1
60	099228001052	Key	1
61	099228001053	Foam	1
62	099253001001	Battery Cover	1
63	099228001054	Motor	1
64	099228001055	Screw (ST4.8 x 18 mm)	4
65	099228001010	Pulley Casing	1
66	099228001016	Big Belt Pulley	1
67	099228001056	Nut (M6)	3
68	099228001057	Nut (M8)	1
69	099228001058	Bearing (6000RS)	1
70	099228001059	Axle	1
71	099228001060	O-Ring	1
72	099228001061	Bearing (608RS)	1
73	099228001015	Synchronous Pulley	1
74	099228001062	Belt	1
75	099228001011	Pulley Cover	1
76	099253001008	Grass Catcher Frame	1
	Not Shown:		
	998000452	Operator's Manual	

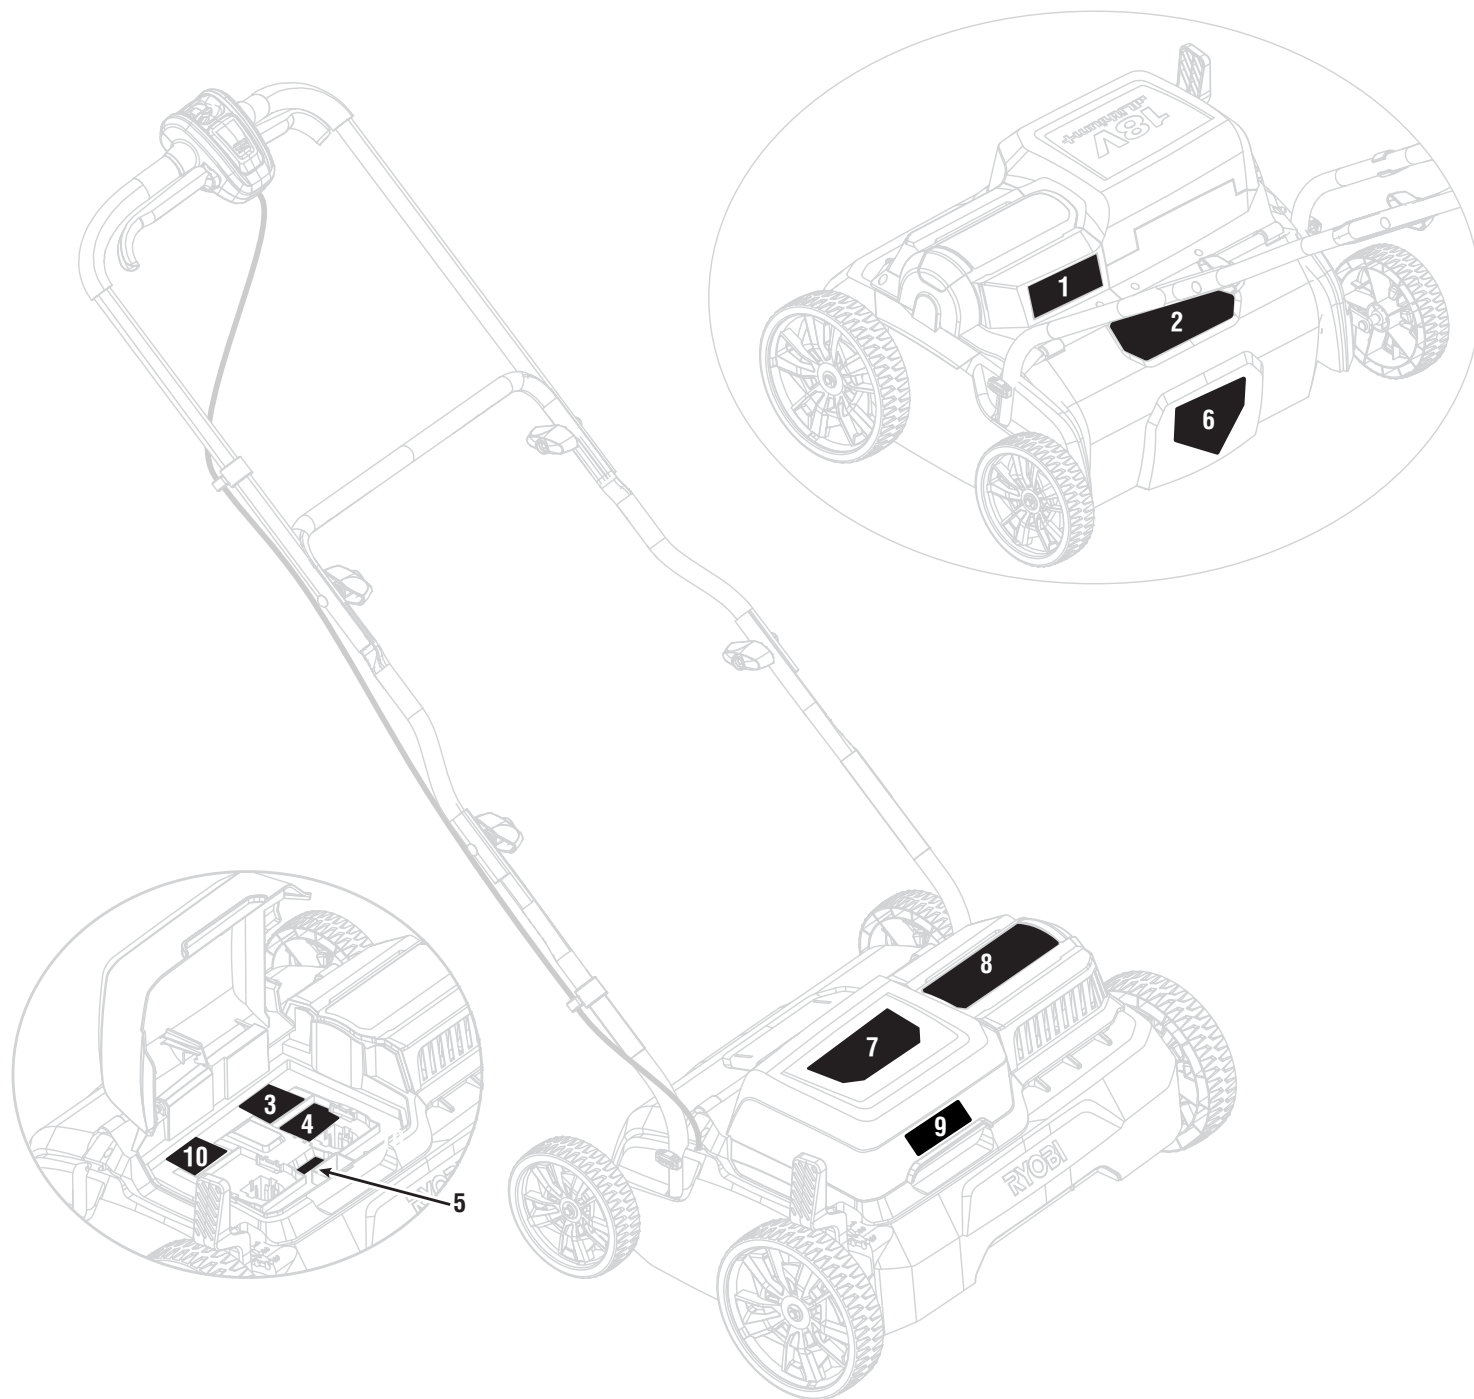

PARTS LIST — LABELS

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	941588884	Data Label	1
2	941588885	Icons\Warning Label (Part 1)	1
3	941588887	Key Warnings Label	1
4	941588890	Battery Wet Conditions Label	1
5	941588894	Start Key Label	1

KEY NO.	PART NO.	DESCRIPTION	QTY.
6	941641001	CPSC Cut Finger Label	1
7	941588893	RYOBI ONE+ HP Logo Label	1
8	941588892	ONE+ HP/Brushless Logo Label	1
9	941263133	14 in. Callout Label	1
10	941588891	Must Use 2X Batteries Label	1

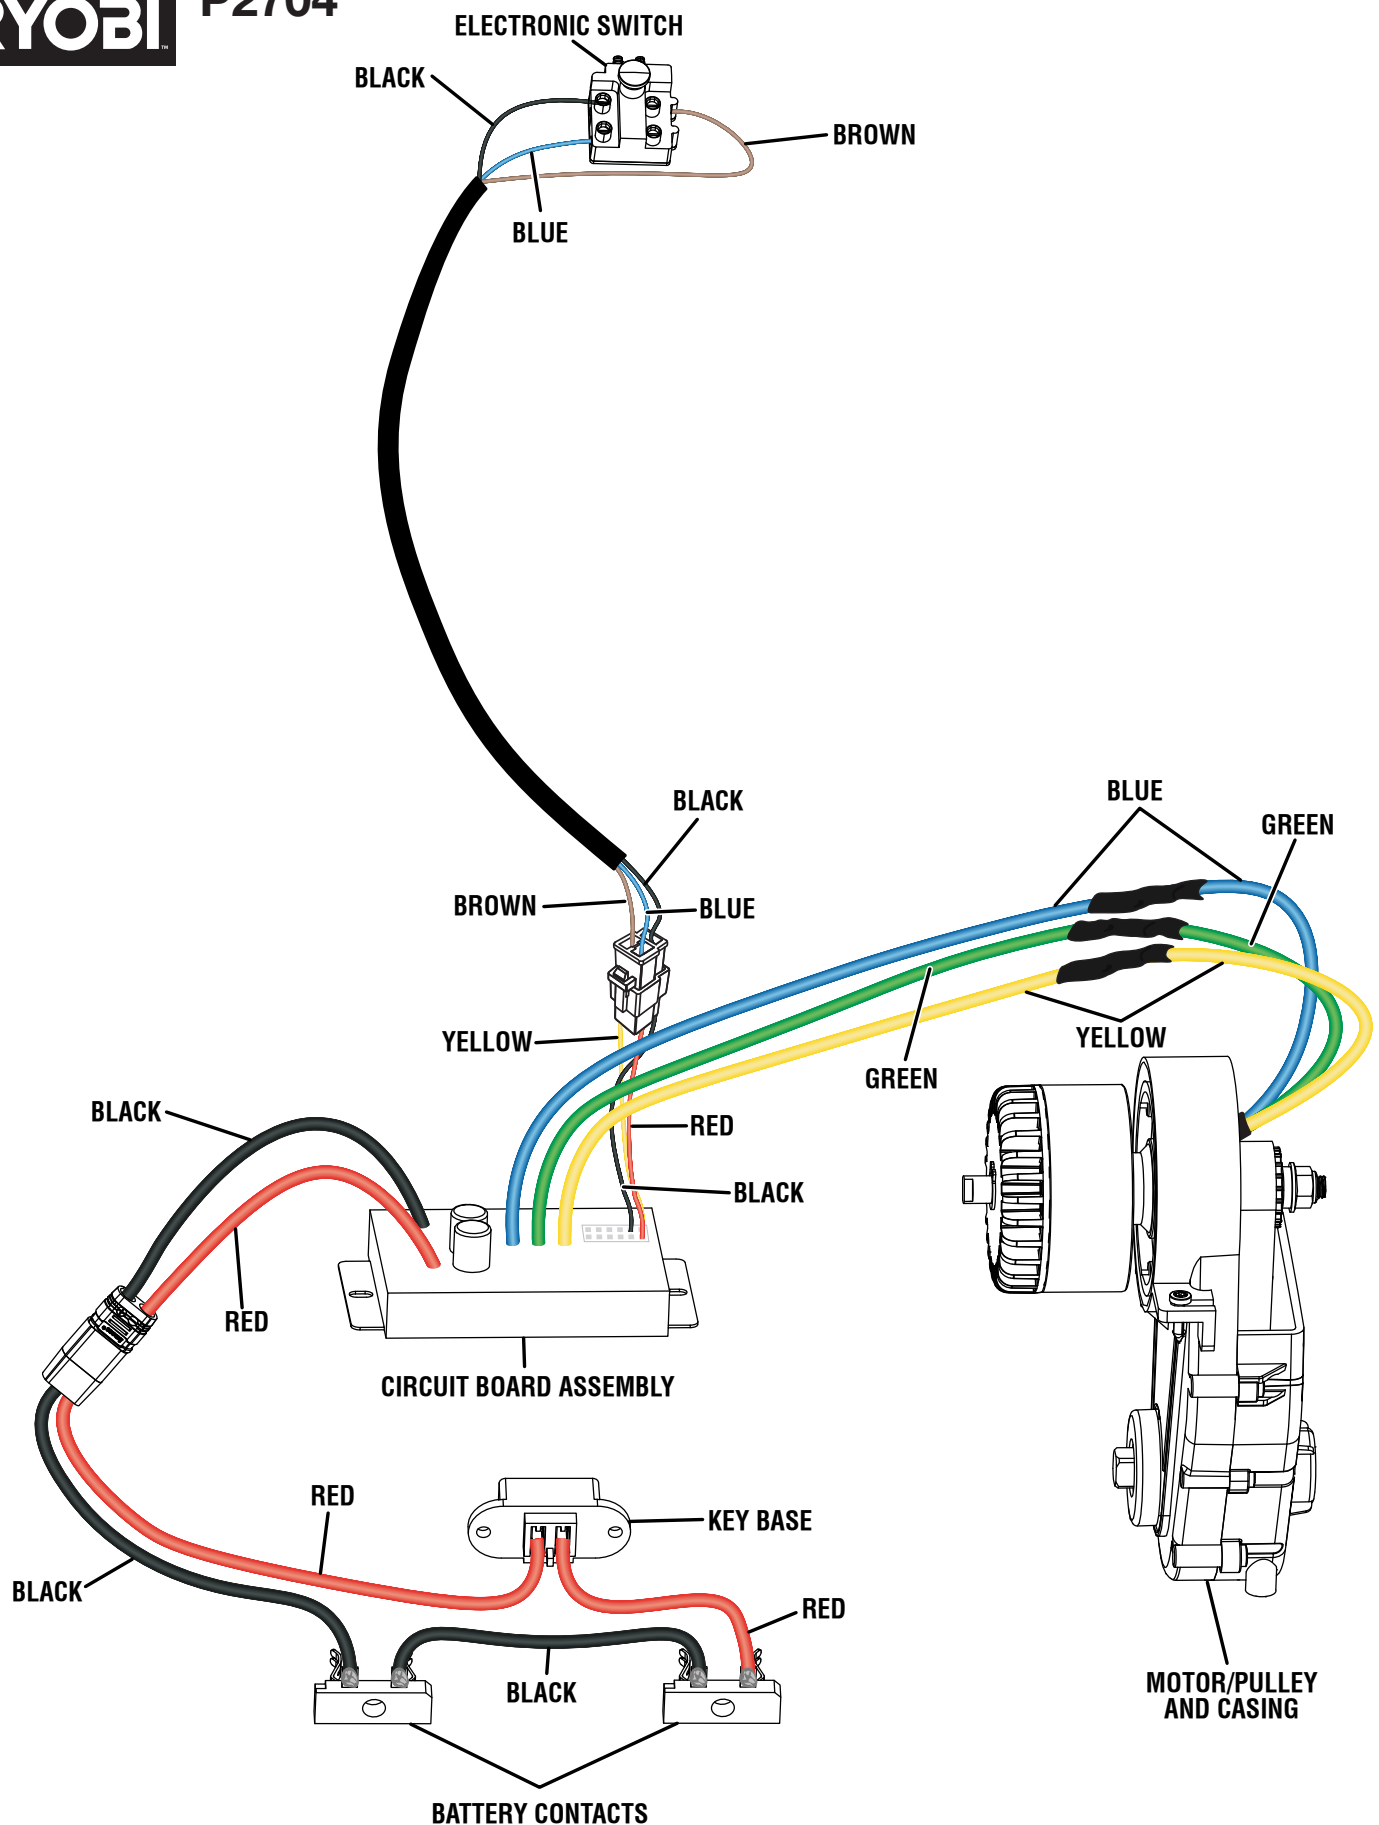

WIRING DIAGRAM