

REPAIR SHEET

BRAND

RYOBI

DESCRIPTION


MODEL NO.

P2904

MFG. NO.

107419016

18 Volt Outdoor Patio Cleaner

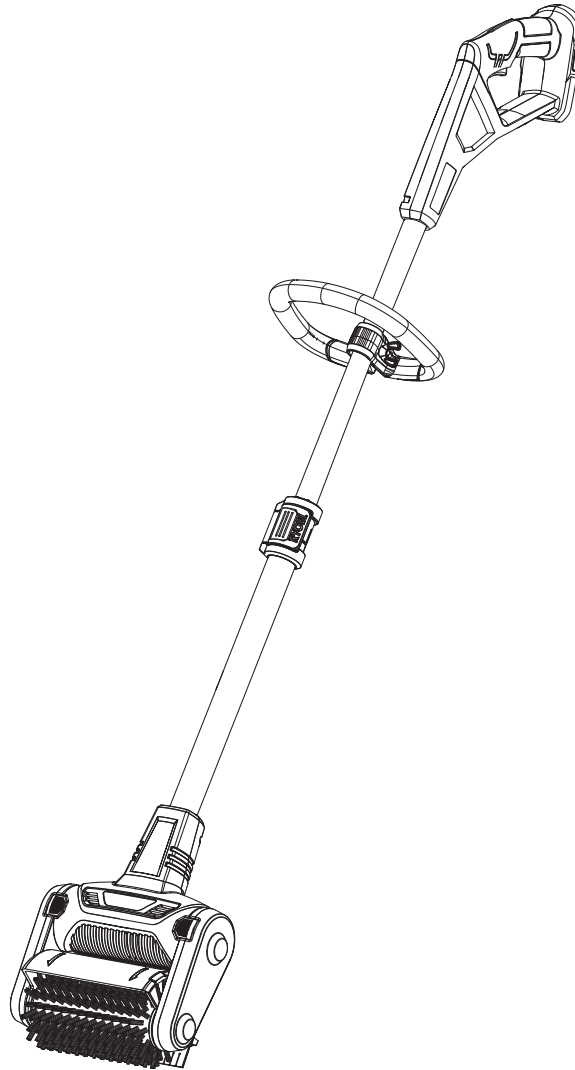


ONE WORLD TECHNOLOGIES, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

4-21-21 (Rev:02)

The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

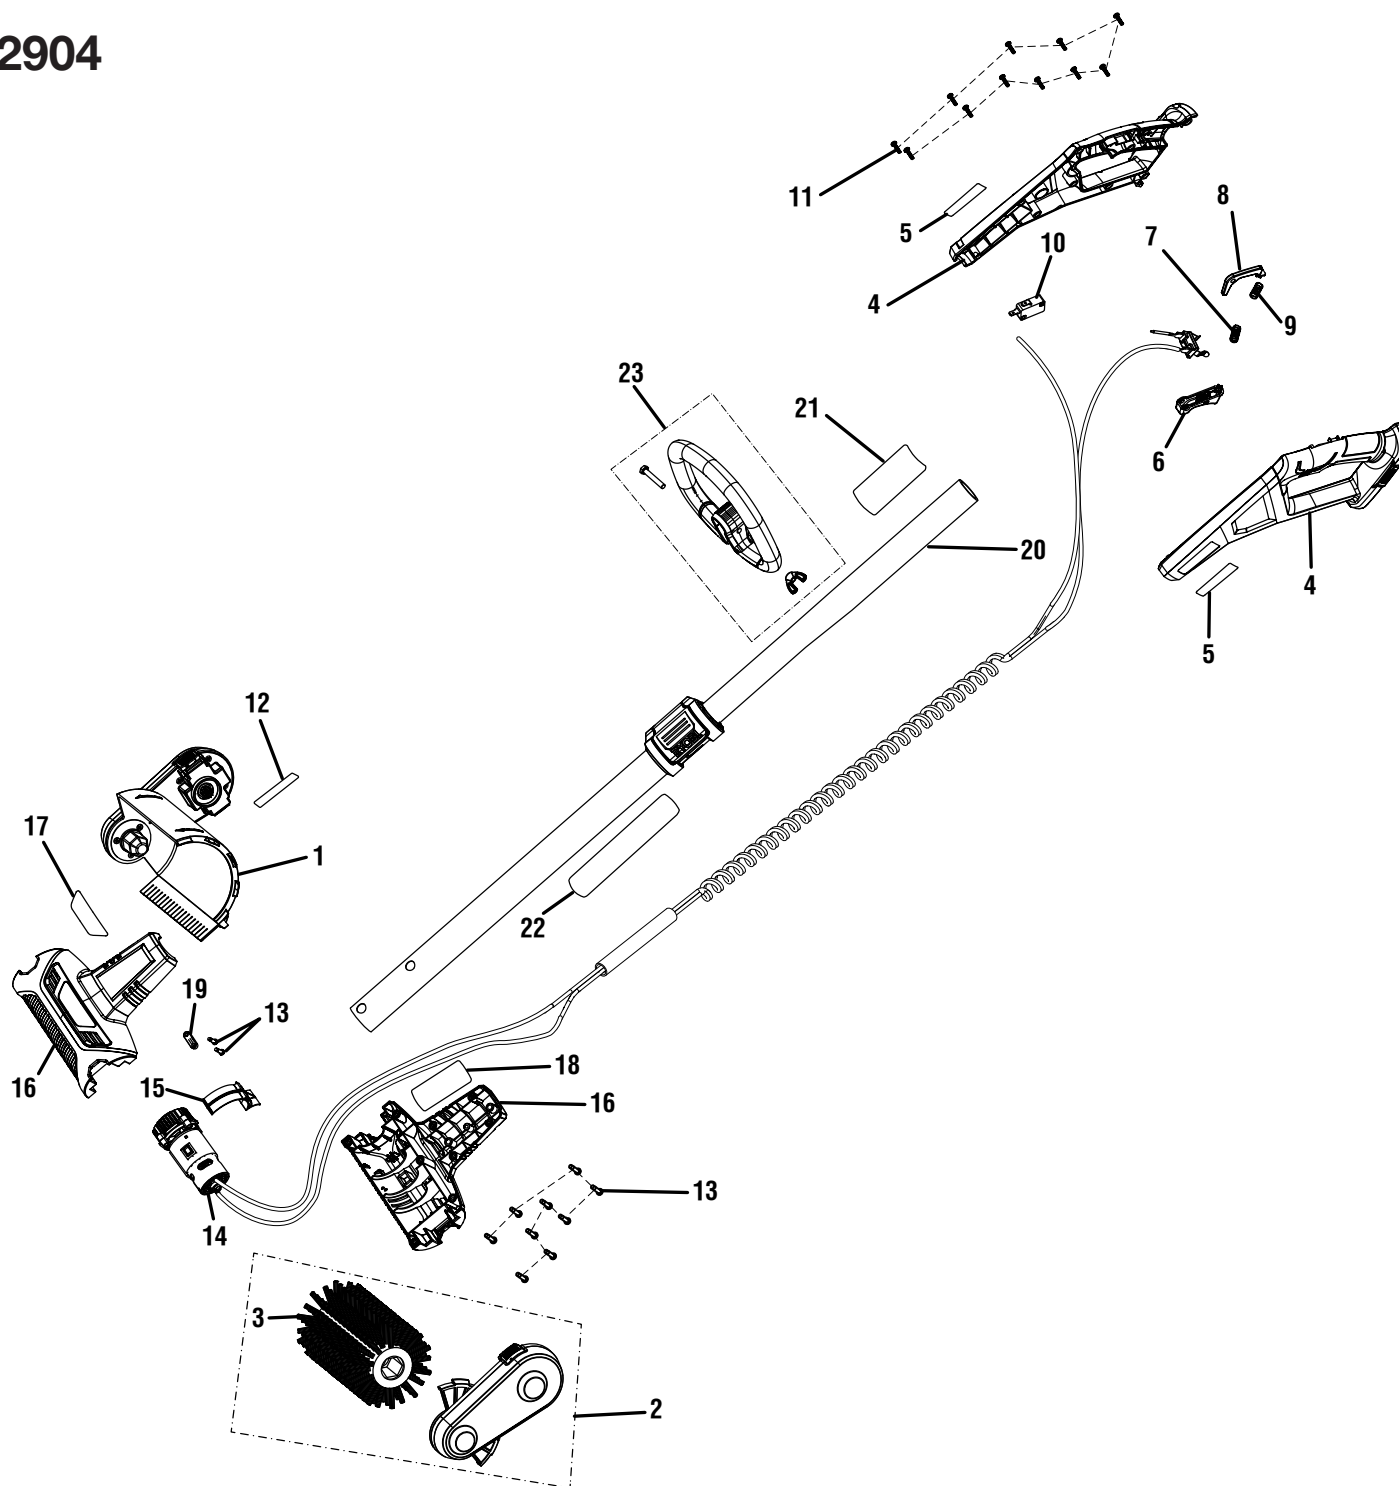


**P2904****PARTS LIST**

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	314187001	Left Mounting Assembly (Inc. Key No. 12)	1
2	205520001	Right Roller Brush Assembly (Inc. Key No. 3)	1
3	314190001	Roller Brush	1
4	205517001	Rear Handle Assembly (Inc. Key No. 5)	1
5	940705492	Logo Label	2
6	525491002	Trigger	1
7	679002002	Trigger Spring	1
8	525492001	Trigger Lock-Out Button	1
9	679083001	Lock Out Button Spring	1
10	760279001	Micro Switch	1
11	660206055	Screw (M3.5 x 14 mm, Phillips Pan Hd.)	11
12	941263009	Icon Label	1
13	660208052	Screw (M4 x 16 mm, Pan Hd.)	11

KEY NO.	PART NO.	DESCRIPTION	QTY.
14	205519001	Motor and Gear Assembly	1
15	536684001	Air Channel	1
16	205516001	Motor Housing Assembly (Inc. Key Nos. 17-18)	1
17	940705489	Logo Label	1
18	941263018	Data Label	1
19	513211001	Cord Clip	1
20	205518001	Telescope Shaft Assembly (Inc. Key Nos. 21-27)	1
21	941263010	Icon/Warning Label	1
22	941263011	Shaft Warning Label (FR/SP)	1
23	308991003	Handle Assembly	1
	Not Shown:		
	998000572	Operator's Manual	



P2904

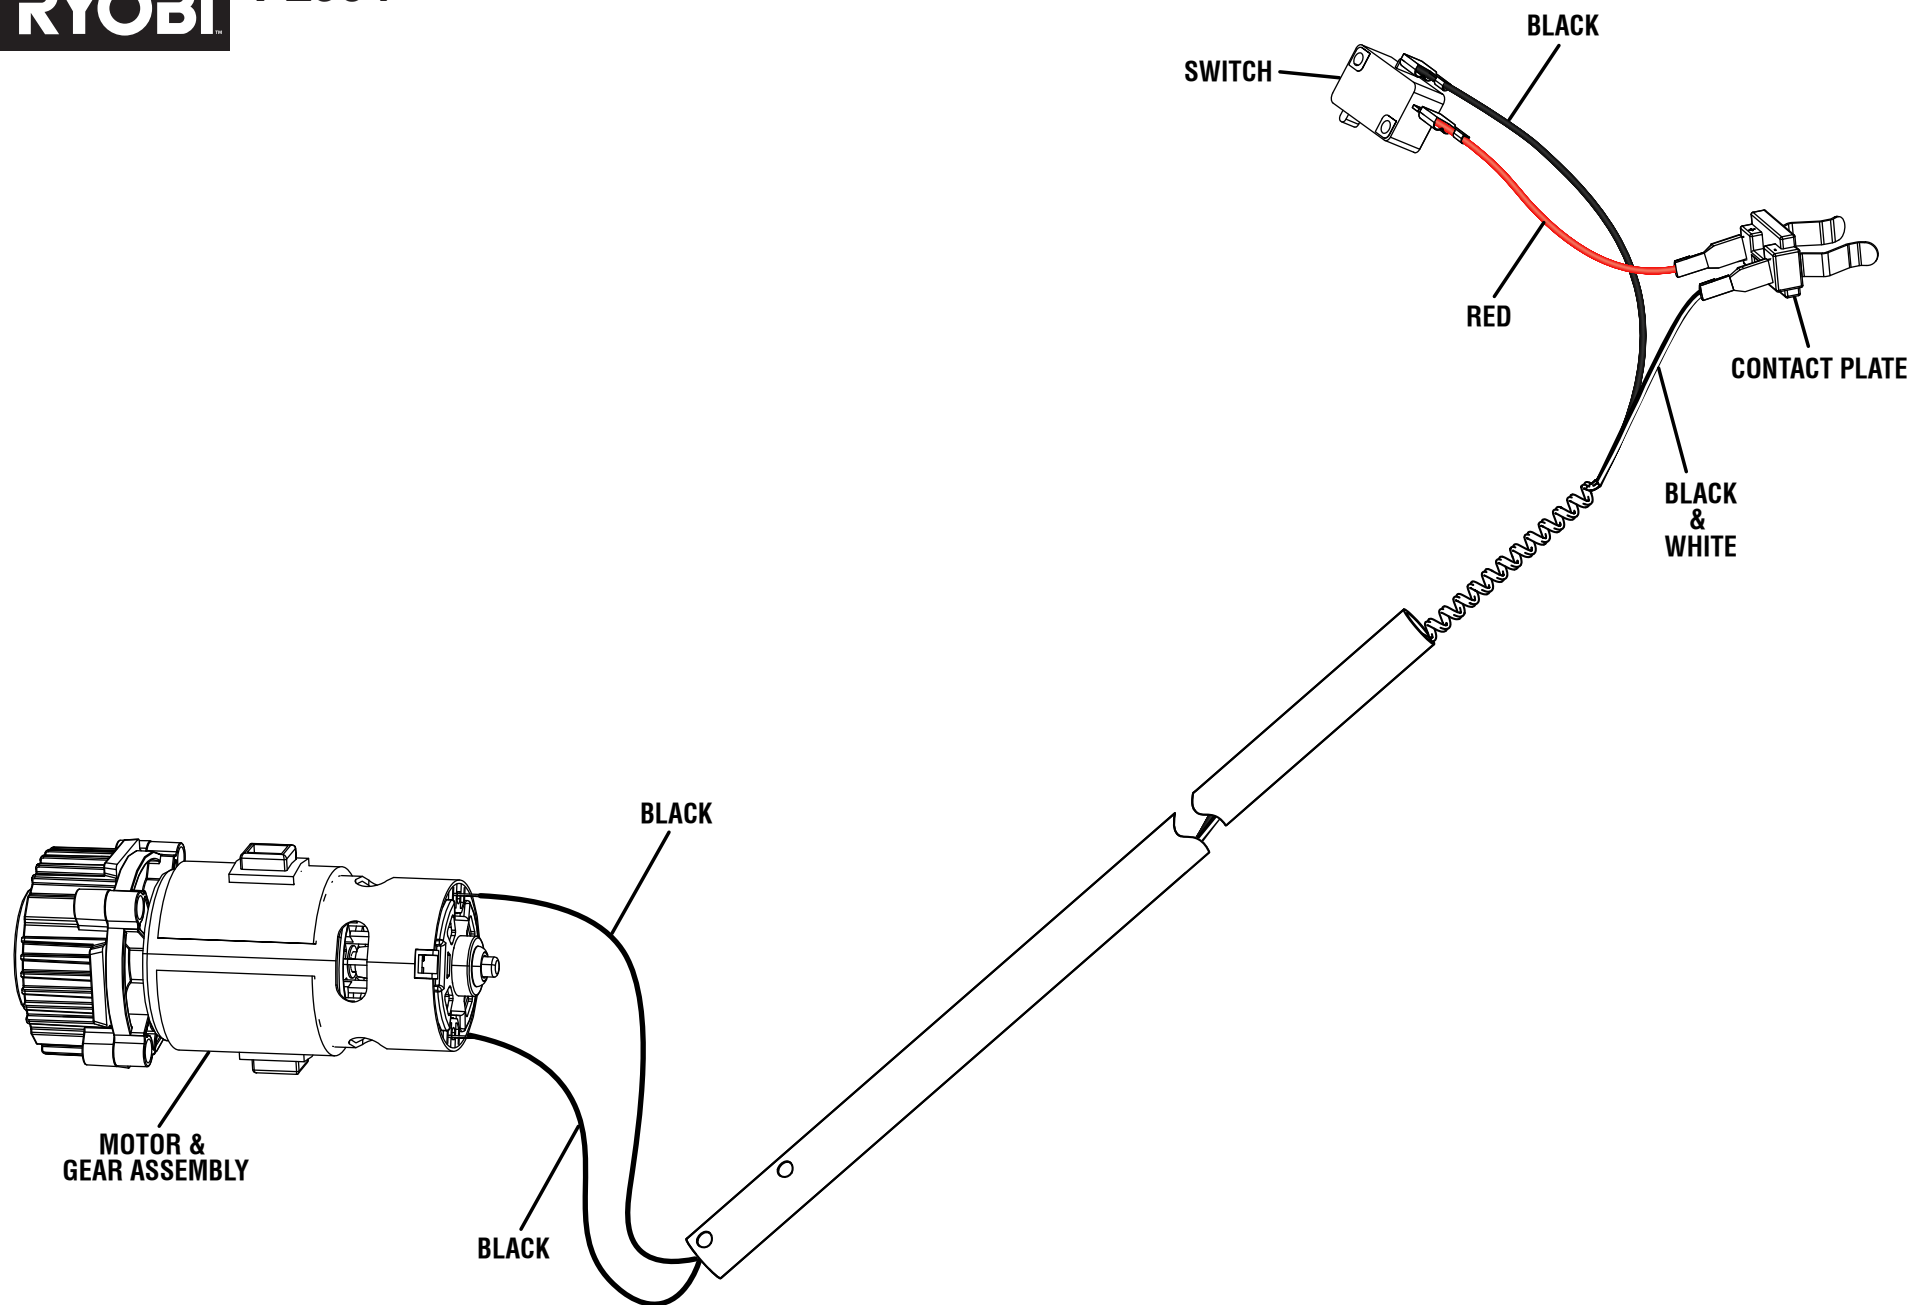

WIRING DIAGRAM