

REPAIR SHEET

BRAND


RYOBI

DESCRIPTION

18 Volt Reciprocating Saw

MODEL NO.

P514

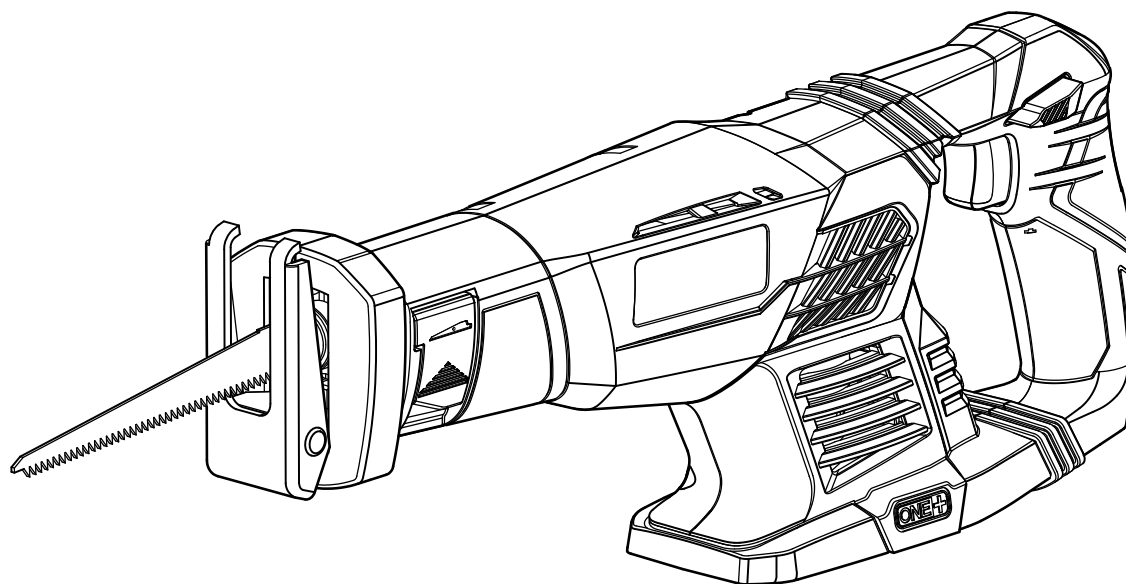


TTI CONSUMER POWER TOOLS, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

2-14-22 (Rev:08)

The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

RYOBI P514

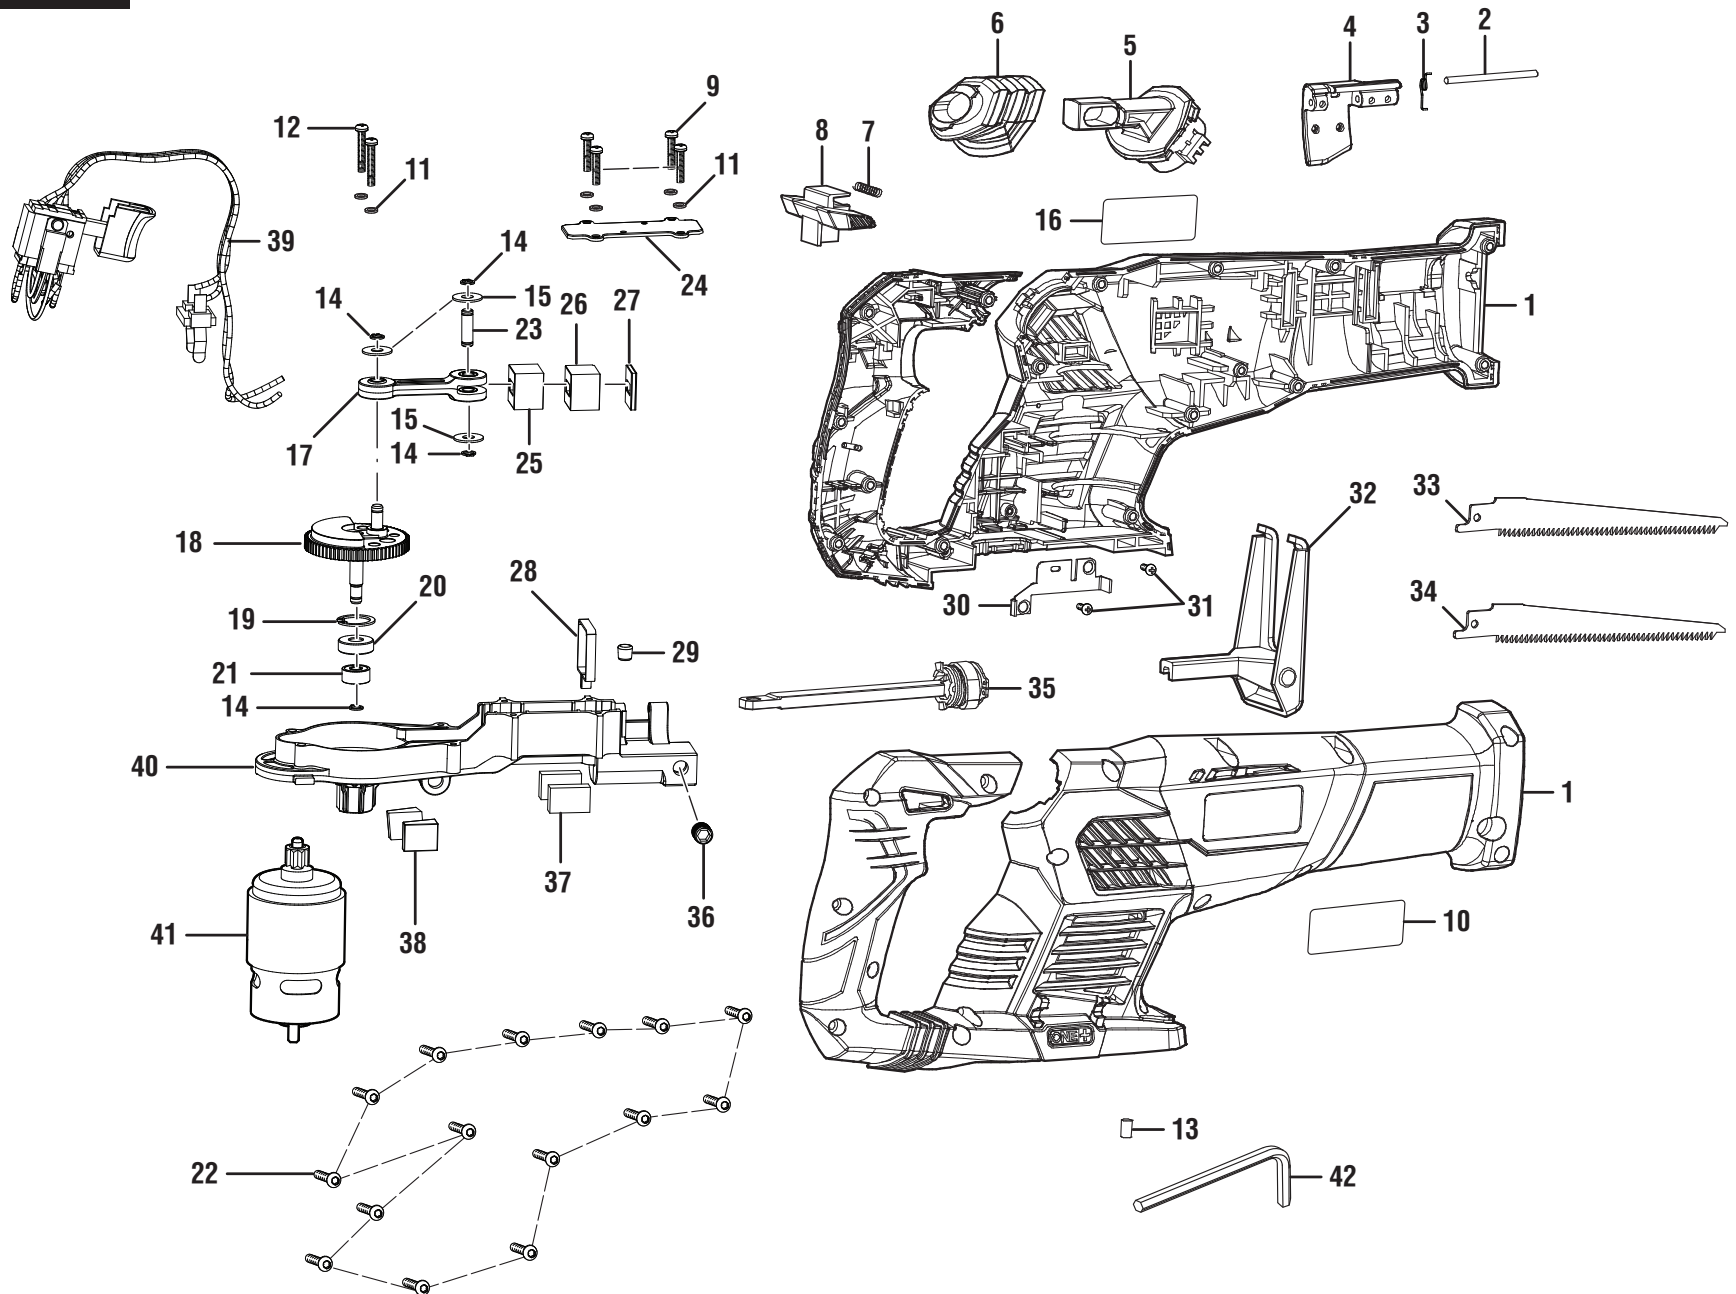




P514

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	201959001	Housing Assembly	1
2	690476001	Pin	1
3	690475001	Torsion Spring	1
4	304552001	Blade Clamp Lock/Release Lever	1
5	523283001	Connecting Rod (Handle)	1
6	564095001	Rubber Sleeve	1
7	6799802	Compression Spring	1
8	523282001	Lock-off Button	1
9	6616501	Screw (M4 x 14 mm, Pan Hd.)	4
10	940488273	Data Label	1
11	670030004	Spring Washer	6
12	660212072	Screw (M4 x 26 mm, Pan Hd.)	2
13	560219003	Rubber Bumper	1
14	670704001	Retaining Ring	4
15	690915019	Washer (OD16 x ID6.3 x 1.2t)	3
16	940304497	Logo Label	1
17	300592013	Connecting Rod Assembly	1
18	300308037	Gear Assembly	1
19	6902501	Retaining Ring	1
20	681565001	Ball Bearing (607zz)	1
21	681566001	Ball Bearing (696zz)	1
22	660024015	Screw (M4 x 14 mm, Pan Hd.)	15

KEY NO.	PART NO.	DESCRIPTION	QTY.
23	681081002	Pin	1
24	633372001	Sliding Rod Cover	1
25	672355003	Slide Bushing	1
26	672353003	Front Slide Bushing	1
27	901512001	Fiber Sheet (20.5 x 16.9 x 3 mm)	1
28	561319001	Foam Rubber	1
29	5670401	Rubber Bumper	1
30	633766002	Wire Guard	1
31	660221008	Screw (M2.6 x 6 mm)	2
32	300216057	Shoe Assembly	1
33	682369001	Wood Cutting Blade	1
34	690292006	Metal Cutting Blade	1
35	300309032	Sliding Rod Assembly w/Quick Release	1
36	6617001	Screw (M10 x 10 mm, Hex Soc. Hd.)	1
37	5670301	Rubber Wedge	2
38	5672301	Rubber Pad	2
39	270001505	Switch Assembly	1
40	641761002	Gear Case Support	1
41	230074015	Motor Assembly	1
42	6800201	Hex Key (5 mm)	1
	Not Shown:		
	988000658	Operator's Manual	

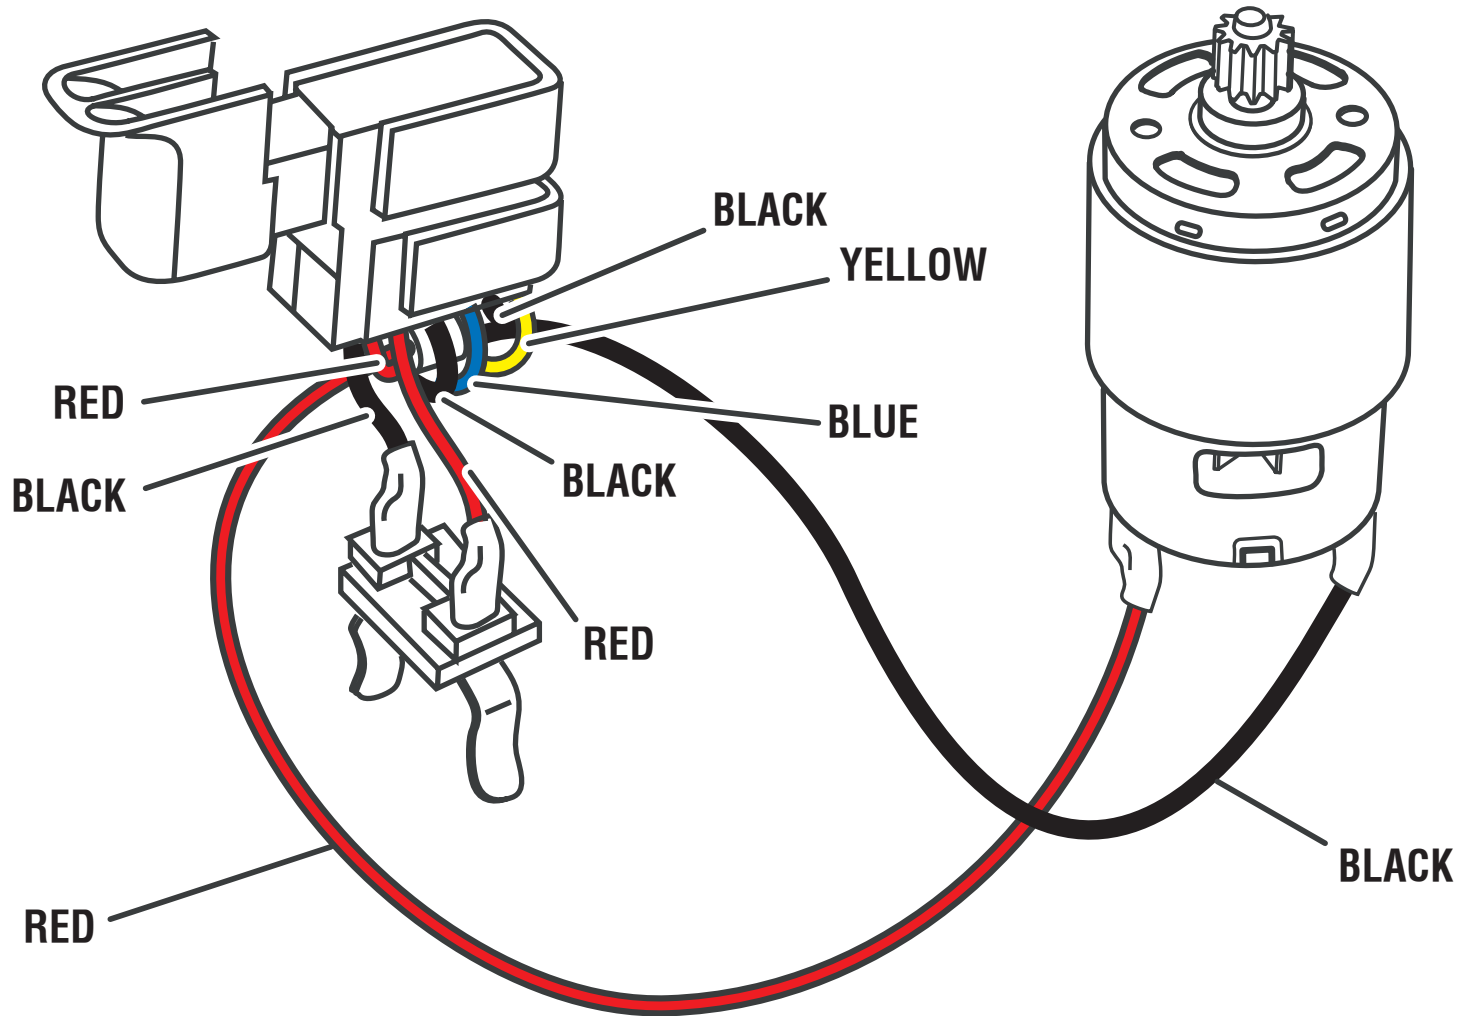

WIRING DIAGRAM