

REPAIR SHEET

BRAND


RYOBI

MODEL NO.

PBF100

DESCRIPTION

18 Volt 5 in. Dual Action Polisher

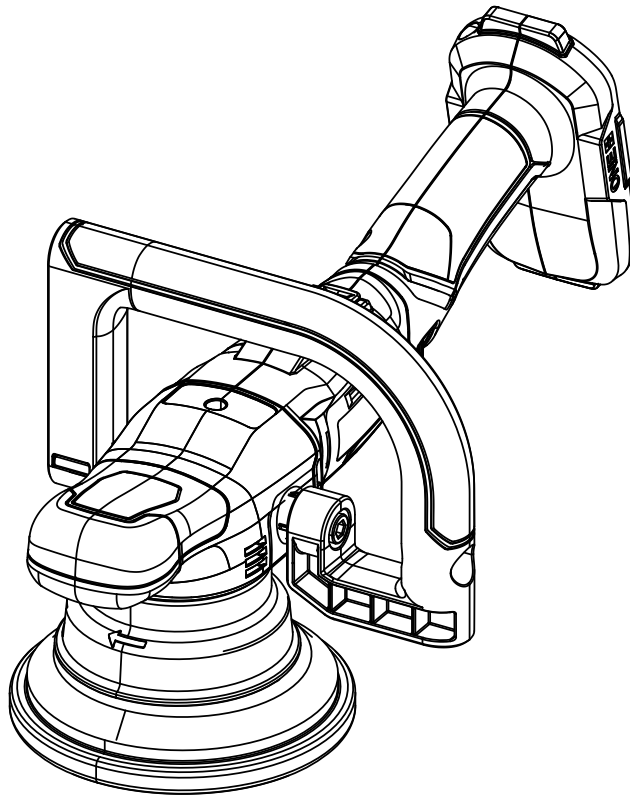


TTI CONSUMER POWER TOOLS, INC.

P.O. Box 1288, Anderson, SC 29622 1-800-525-2579 www.ryobitools.com

12-15-22 (Rev:06)


The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

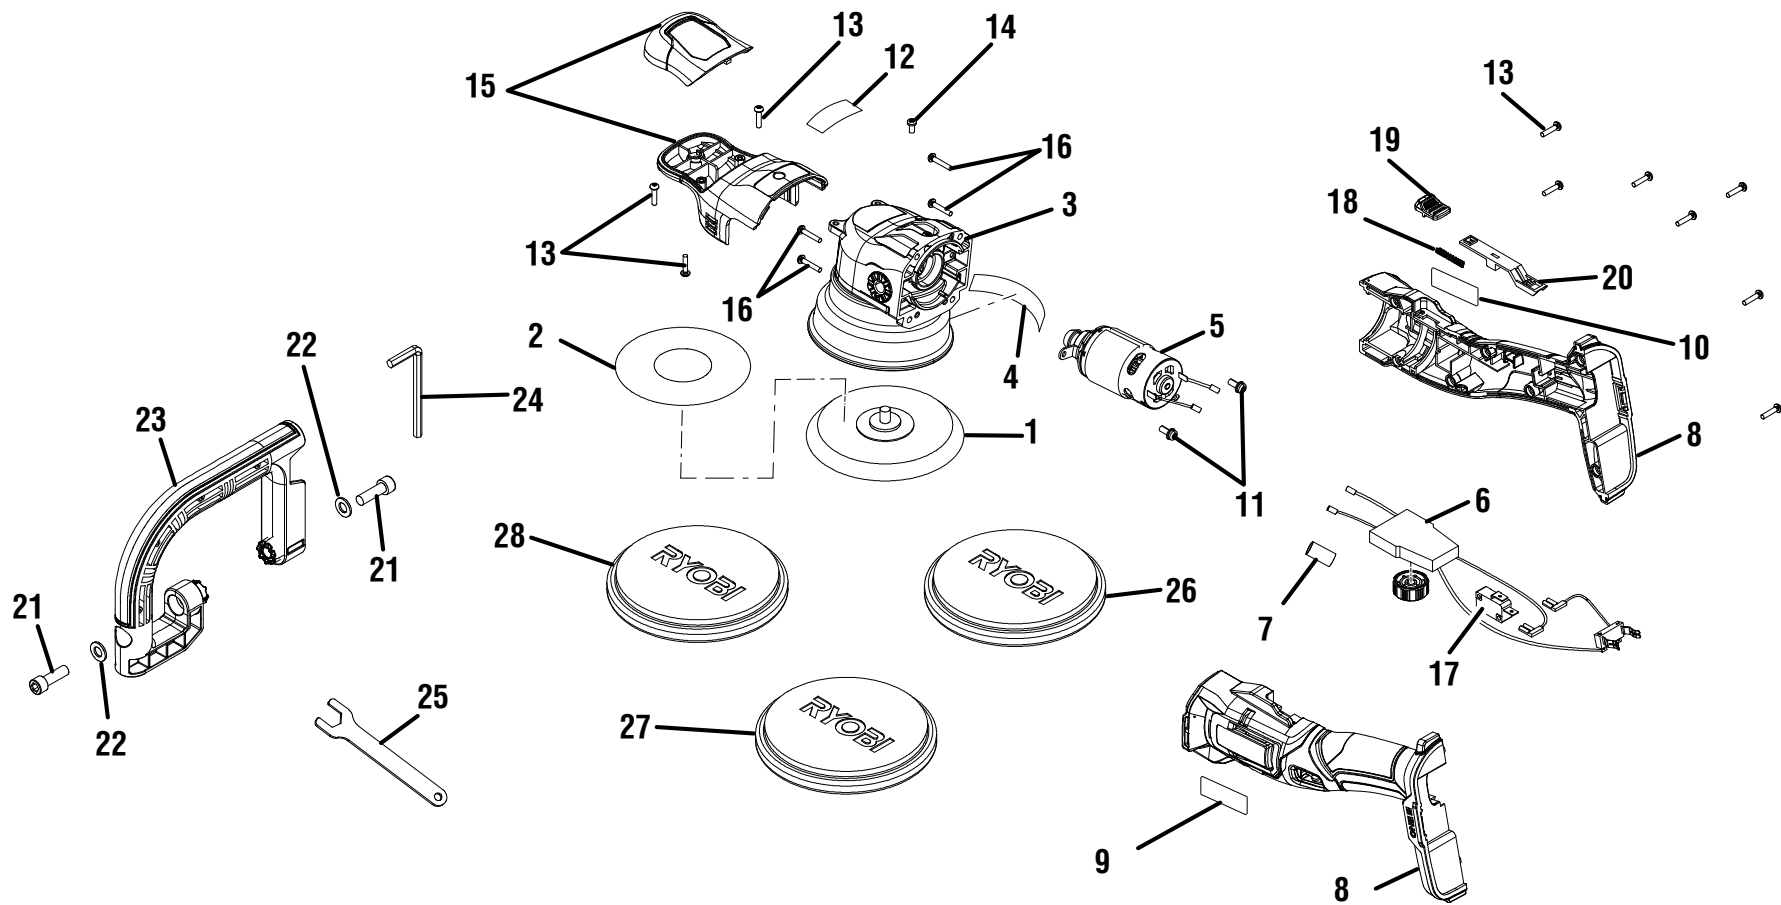

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	019075003106	Backing Pad Assembly (Inc. Key No. 2)	1
2	01907500303K	Backing Pad Label	1
3	019075001601	Gear Box, Skirt, and Output Shaft Assembly	1
4	01907500302K	Battery Statement	1
5	019075001401	Motor and Pinion Assembly	1
6	019075003301	Circuit Board and Speed Controller Assembly	1
7	019075001065	Heat-Shrinkable Tubing	2
8	019075003108	Housing Assembly (Inc. Key Nos. 9-10)	1
9	941114319	Logo Label	1
10	01907500301K	Icon/Data Label	1
11	019498008013	Screw (M4 x 10 mm, Pan Hd.)	2
12	01907500304K	Speed Callout Label	1
13	019062001013	Screw (M4 x 15 mm, Pan Hd.)	10
14	019075001026	Screw (M4 x 10 mm, Torx Pan Hd.)	1
15	019075003104	Pommel Handle Assembly (Inc. Key No. 12)	1

KEY NO.	PART NO.	DESCRIPTION	QTY.
16	019075001028	Screw (M4 X 22 mm, Torx Pan Hd.)	4
17	760034038	Momentary Switch	1
18	019075001054	Switch Reset Spring	1
19	019075001042	Switch Push Button	1
20	019075001043	Switch Lever	1
21	019075003046	Bolt (M8 x 30 mm, Hex Soc. Hd.)	2
22	019075003047	Washer	2
23	019075003048	Handle	1
24	019075003049	Right Angle Wrench	1
25	019075001050	Wrench	1
26	019075003051	Cutting Pad	1
27	019075003052	Finishing Pad	1
28	019075003053	Polishing Pad	1
	Not Shown:		
	998000337	Operator's Manual (01907500301Q)	

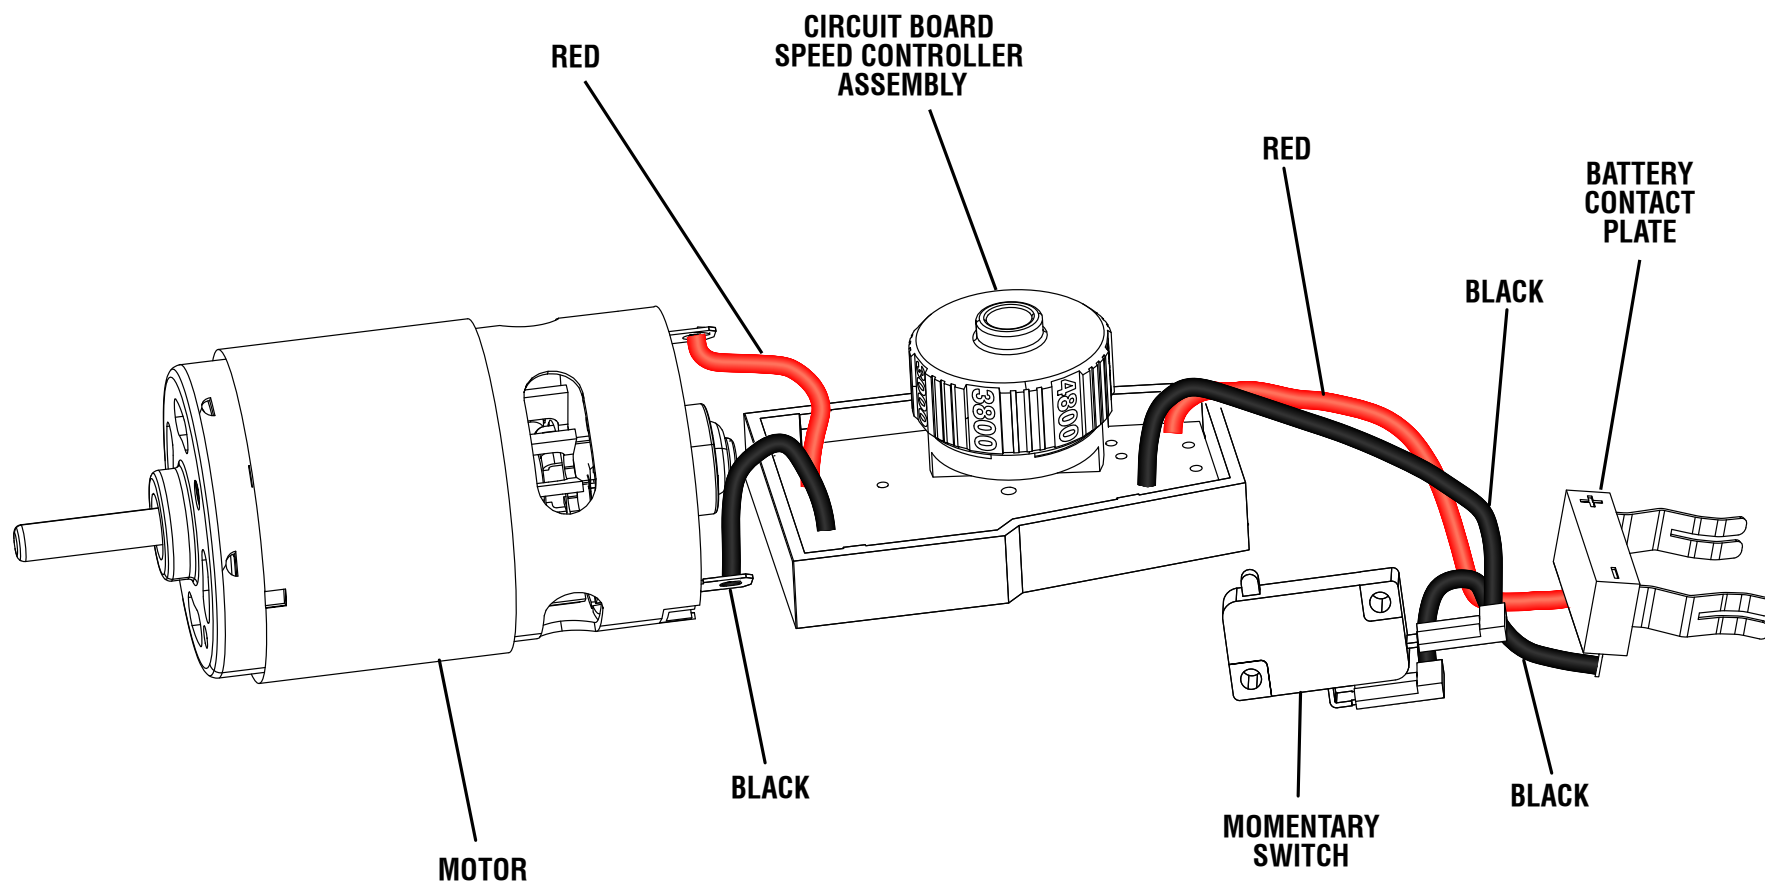

WIRING DIAGRAM