

REPAIR SHEET

BRAND


RYOBI

MODEL NO.

PSBRA02

DESCRIPTION

18 Volt Right Angle Drill

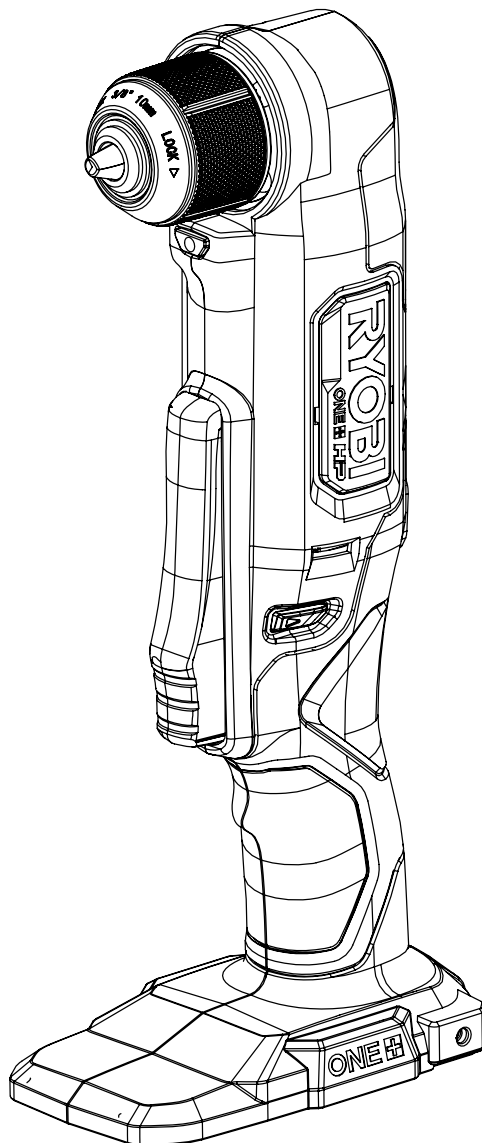


ONE WORLD TECHNOLOGIES, INC.

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

8-5-20 (Rev:02)

The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

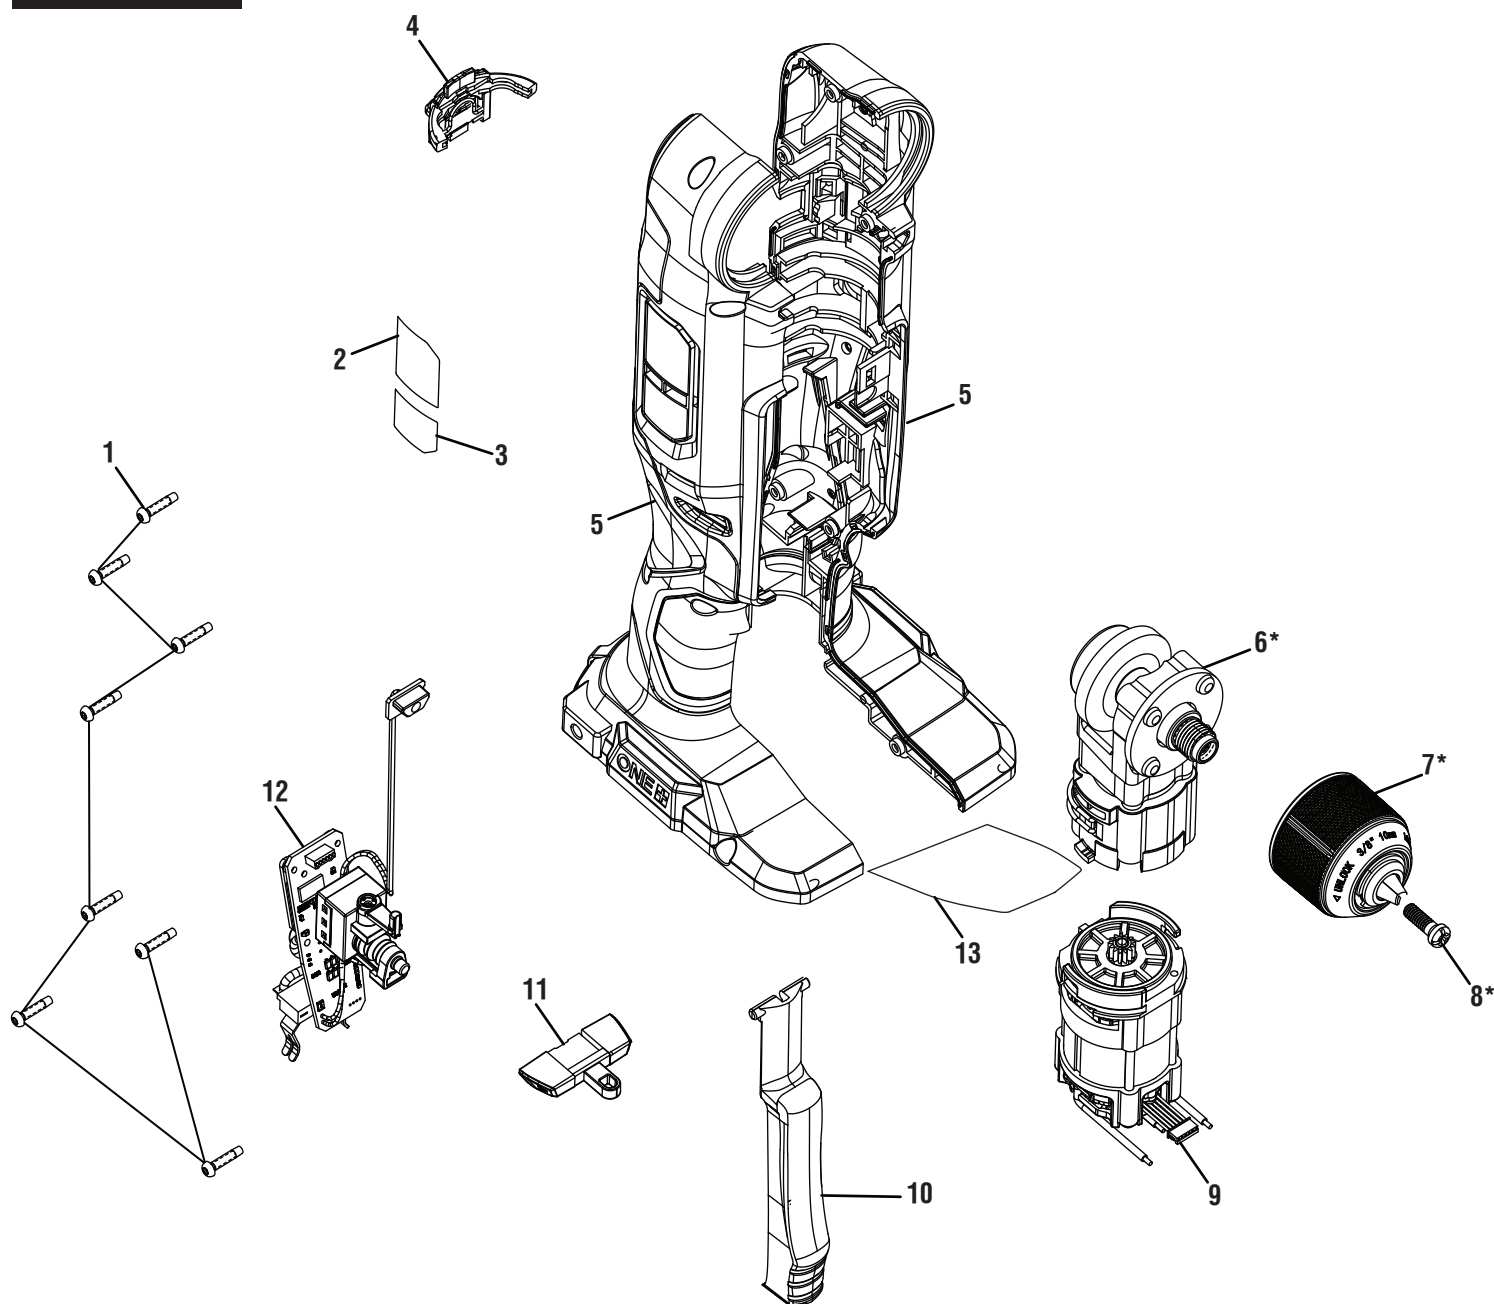


PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	660570005	Screw (M3 x 14 mm, T10 Torx Pan Hd.)	8
2	941120580	Icon/Data Label (Right)	1
3	941120579	Icon/Data Label (Left)	1
4	204118023	Hi-Lo Switch Assembly	1
5	204118024	Housing Assembly (Inc. Key Nos. 2-3 & 13)	1
6*	206940006	Gear Box Assembly	1
7*	674081003	Chuck	1
8*	660134006	Chuck Screw (M6 x 18.5 mm, LHT)	1

KEY NO.	PART NO.	DESCRIPTION	QTY.
9	206940004	Motor Assembly	1
10	541246001	Switch Trigger	1
11	541245001	Forward/Reverse Switch	1
12	281084002	Circuit Board & Switch Assembly	1
13	941123032	Battery Statement Label	1
	Not Shown:		
	998000178	Operator's Manual (961153365)	

*Tools BEFORE S/N: CS20303N670137-0422 must replace keys 6-8 together.

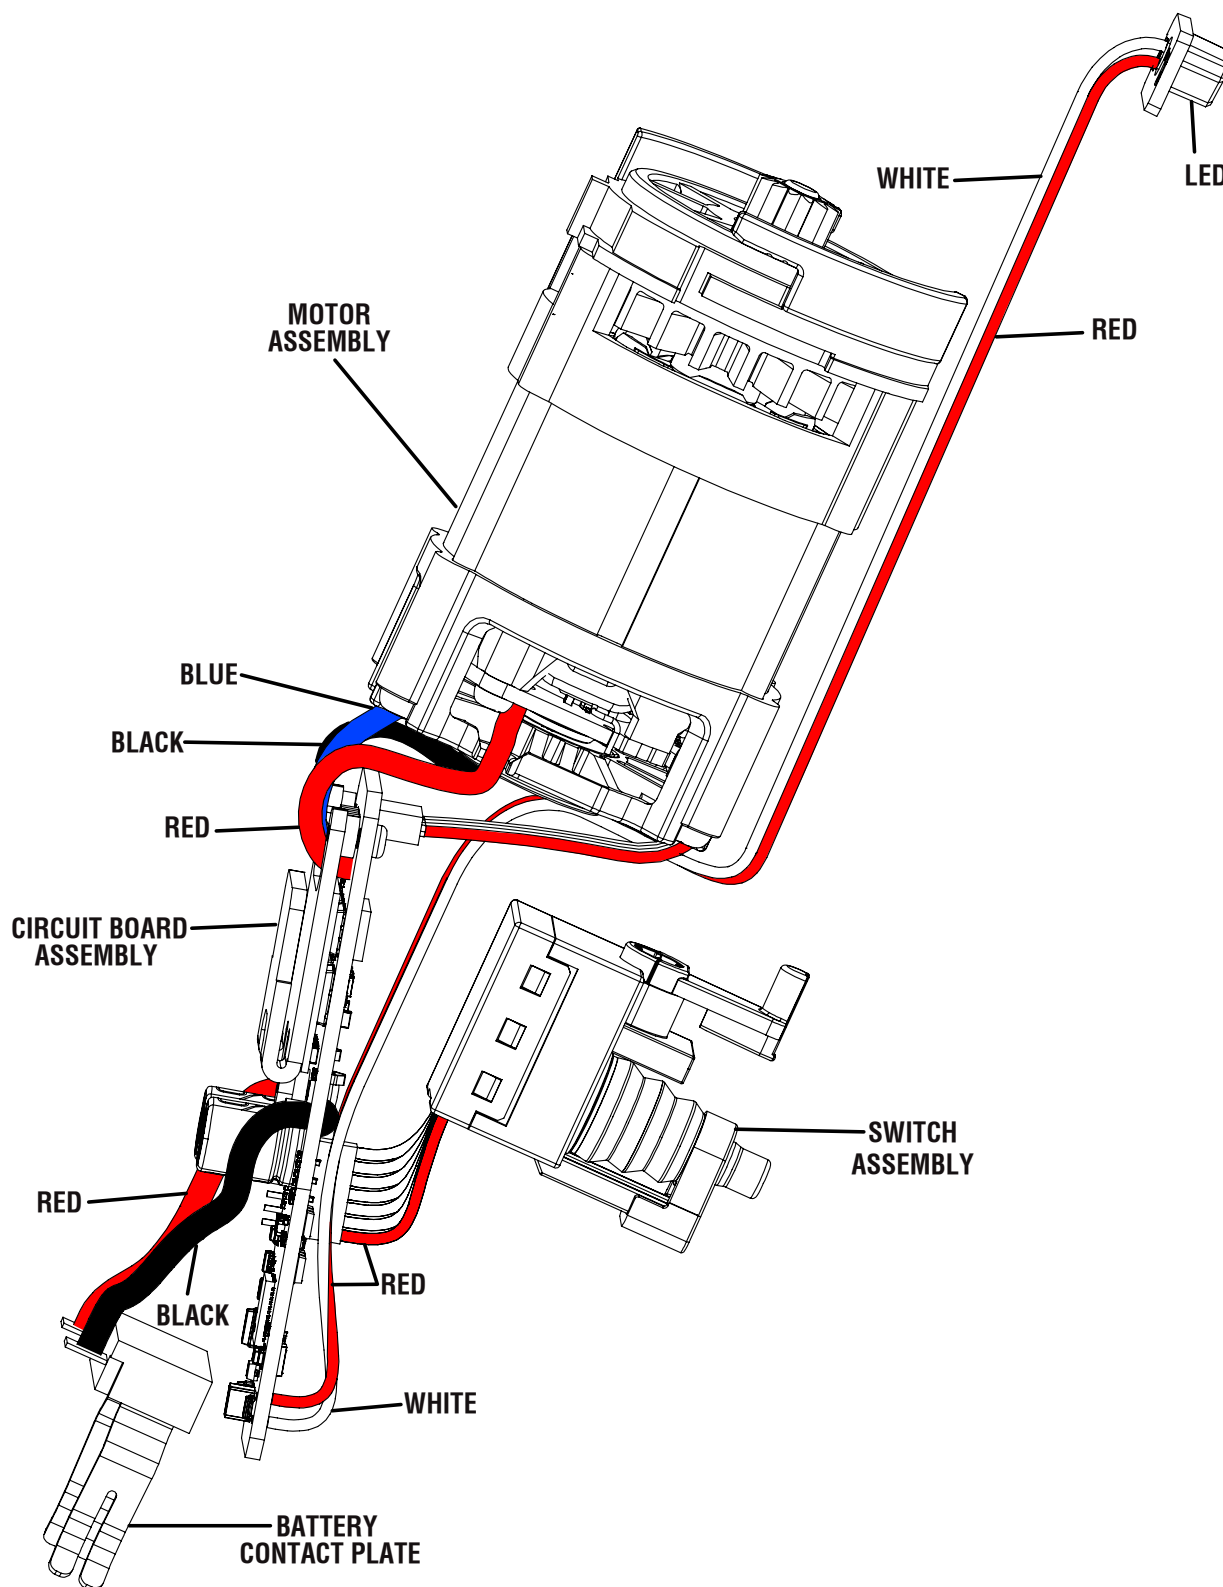

WIRING DIAGRAM