


RY802800 QUICK REFERENCE GUIDE

⚠ WARNING:


This Quick Reference Guide is not a substitute for reading the operator’s manual. To reduce the risk of injury or death, user must read and understand operator’s manual before using this product. All page references refer to the operator’s manual.

FIRST TIME ASSEMBLY


1 Install the handle (see page 7).

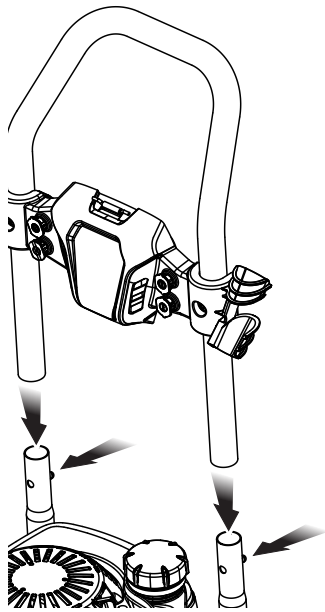


2 Connect the spray wand to the trigger handle (see page 7).

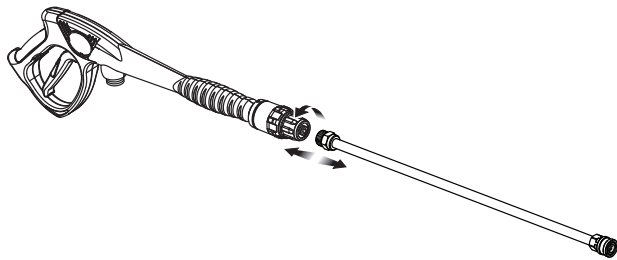

3 Connect the high pressure hose to the trigger handle (see page 7).

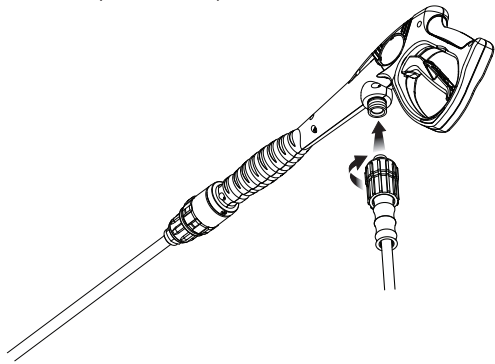


4 Connect the high pressure hose to the pump (see page 7).

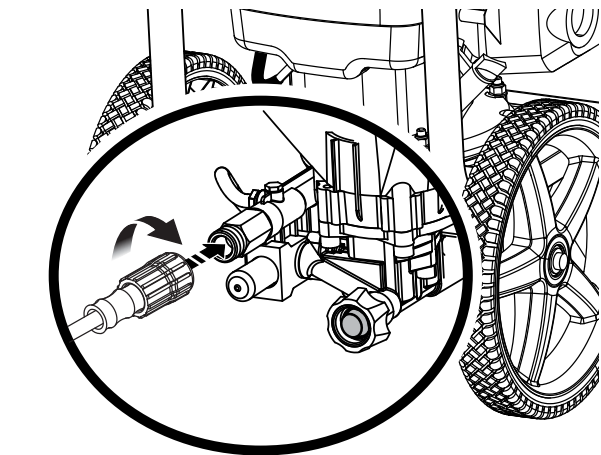

Completely uncoil and straighten high pressure hose to prevent kinks.

5 Connect your garden hose to the pressure washer (see page 8).

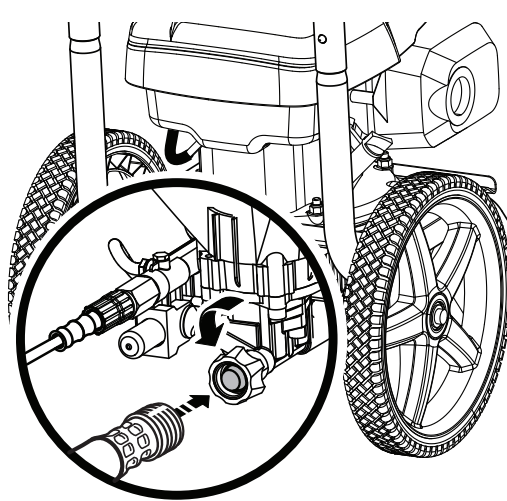

Completely uncoil garden hose or remove completely from reel to prevent kinks.



Turn water faucet on fully.




Make sure there are no leaks.



With no nozzle installed, squeeze the trigger to relieve air pressure. Hold the trigger until a steady stream of water appears.

6 Add entire bottle of lubricant provided to the pressure washer (see page 9).

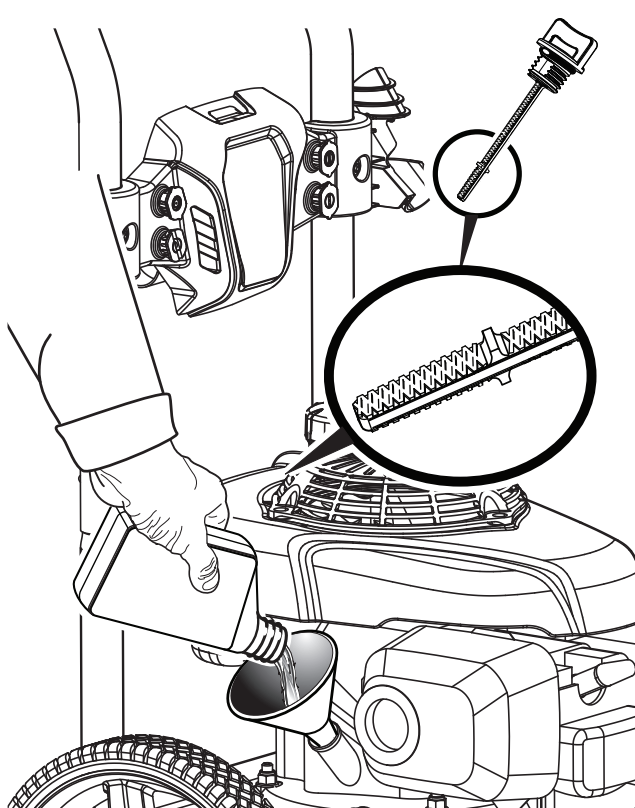


Turn the fuel valve to OFF before adding lubricant.



Set unit on flat surface so engine is level. Remove dipstick, wipe clean, put back in hole (but don't screw in) and check lubricant level.

DO NOT OVERTILT THE UNIT!

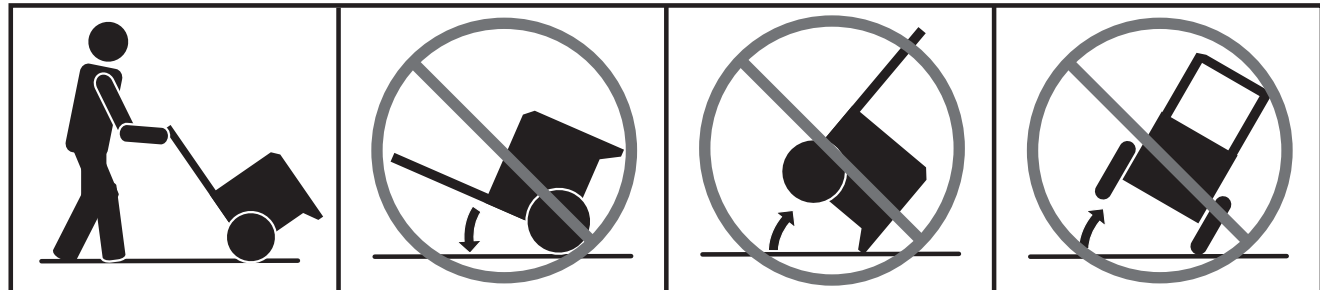


STARTING THE UNIT (COLD START)

1 Add fuel (see page 9).

NOTICE:

Do not use E15 or E85 fuel in this product. It is a violation of federal law and will damage the unit and void your warranty. Only use unleaded gasoline containing up to 10% ethanol.

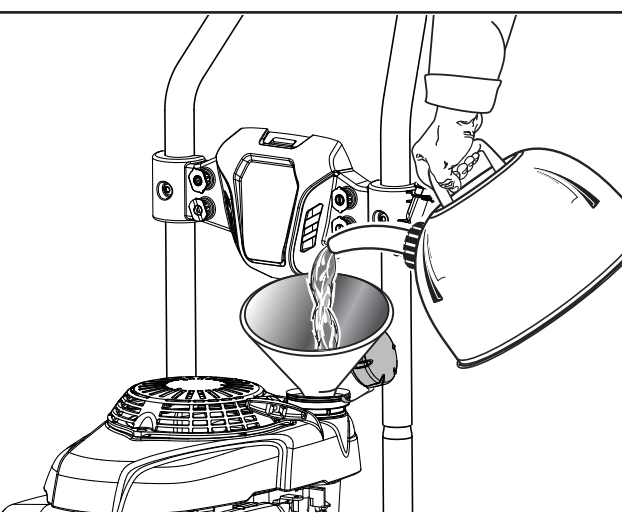


This is a 4-cycle engine. Do not mix fuel and lubricant together.




Mix fuel stabilizer with gasoline according to manufacturer's directions prior to filling the tank.


2 Turn the fuel valve to OPEN (see page 10).

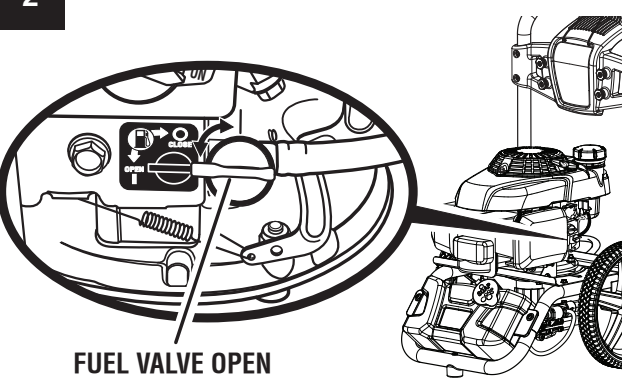


3 Pull choke lever all the way out to START (see page 10).

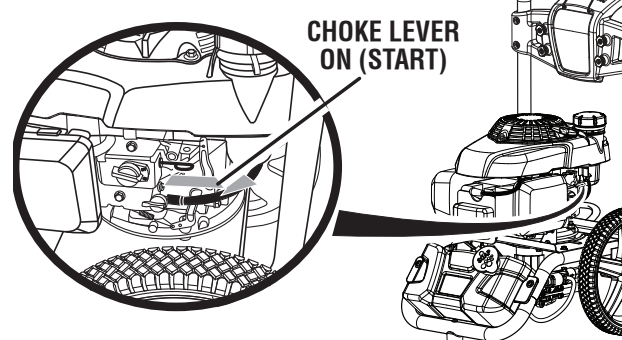


4 Put on/off switch in ON position (see page 10).

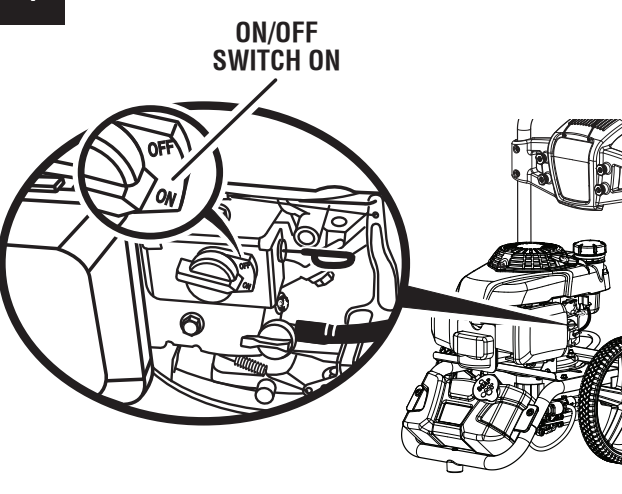

5 Pull starter grip and rope to start (see page 10).

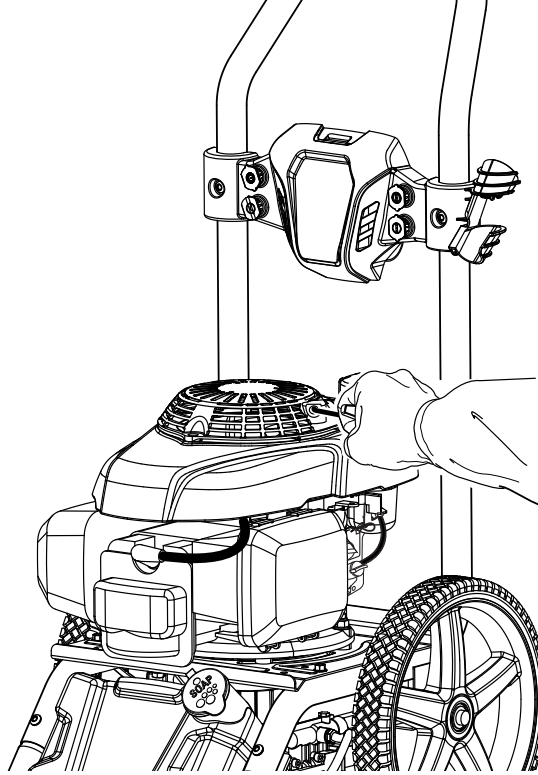


6 Allow engine to run for several seconds, then move choke to OFF (RUN) position (see page 10).

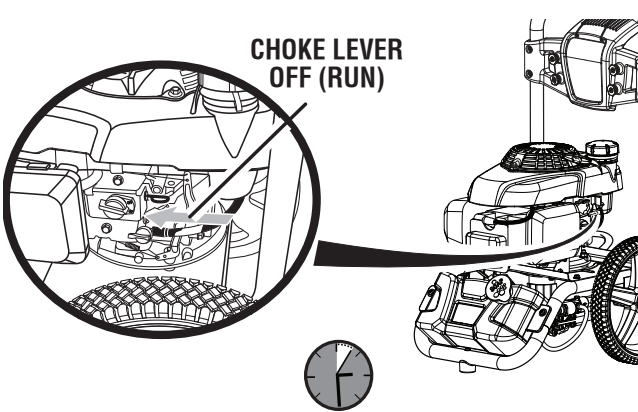

RESTARTING THE UNIT (HOT RESTART)

1 Pull starter grip and rope to start (see page 10).

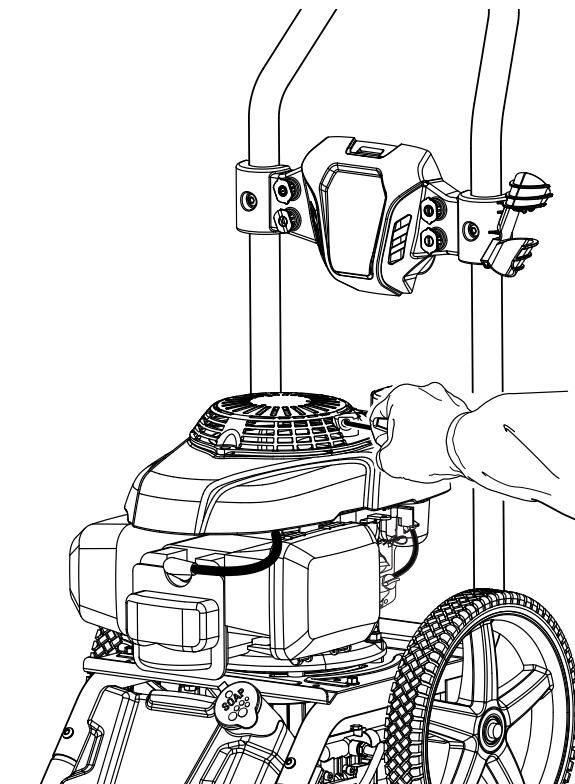


If the engine does not start:


- check for enough fuel;
- may need to adjust choke position;
- try starting again.

USING DETERGENT


1 Pour pressure washer detergent in soap tank (see page 12).

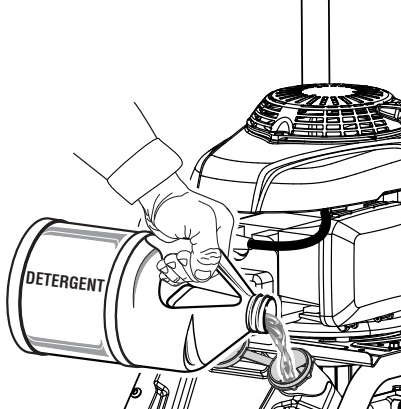

 2 Install blue soap nozzle (see page 11).




3 Squeeze trigger and wait approx. 5 seconds for soap (see page 12).

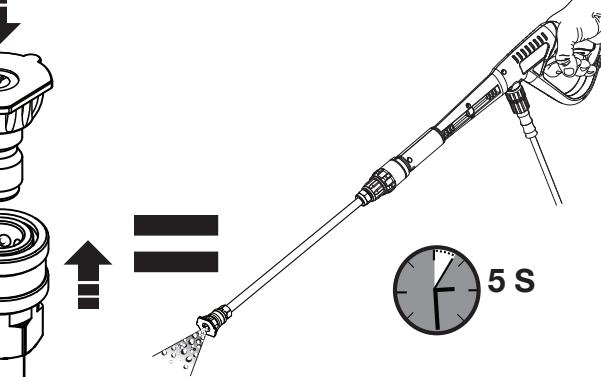

Use of soap nozzle will activate soap injector at a 20:1 dilution ratio.

WARNING! Never use bleach or solvent-based detergent.


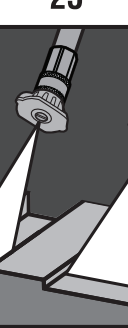
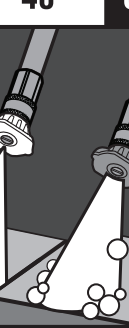
- Will damage your pump
- Will void your warranty
- Will damage plants/shrubs

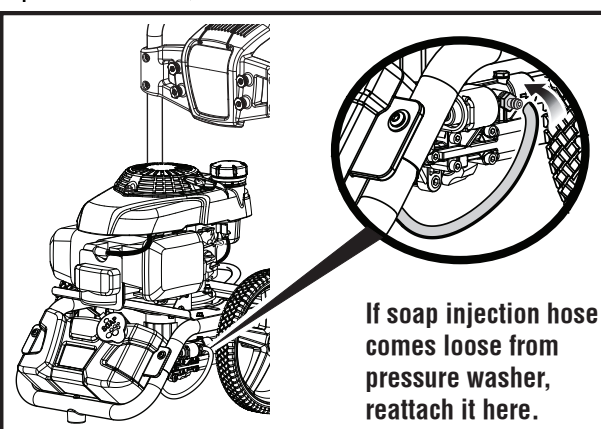

If soap injection hose comes loose from pressure washer, reattach it here.

NOZZLE SELECTION GUIDE

Use the chart below to determine the correct nozzle for your job.

0° 25° 40° SOAP	HIGH PRESSURE (NO SOAP WHEN USING THESE NOZZLES)			LOW PRESSURE (FOR SOAP OR GENTLE RINSE)
 ABRASIVE			GENTLE	
Concrete, Brick, Masonry	0° Red	25° Green	40° White	Blue Soap Nozzle
Siding, Gutters, House	✓	✓	✓	✓
Fencing, Deck, Patio		✓	✓	✓
Lawn Equipment, Boat, RV		✓	✓	✓
✓ Recommended Nozzle    ✓ Use With Caution for Certain Applications				

BEFORE STORING THE UNIT

1 Always add Pump Protector to the unit after each use and before storing. This will significantly improve pump life. (See page 12)  
Pump Protector is available from your local retailer. For further assistance, call customer service at 1-800-860-4050.  
To add, follow the instructions provided by the Pump Protector manufacturer.



Make the most of your purchase! Go to [www.ryobitools.com](http://www.ryobitools.com) and register your new tool online. For questions about operating or maintaining your product, please call, 1-800-860-4050.