


REPLACEMENT PARTS LIST

BRAND RYOBI		DESCRIPTION 40 Volt Power Station
MODEL NO. RYi1802BTVNM RYi1802B6VNM	MFG. NO. 095930353DG9 095930377	

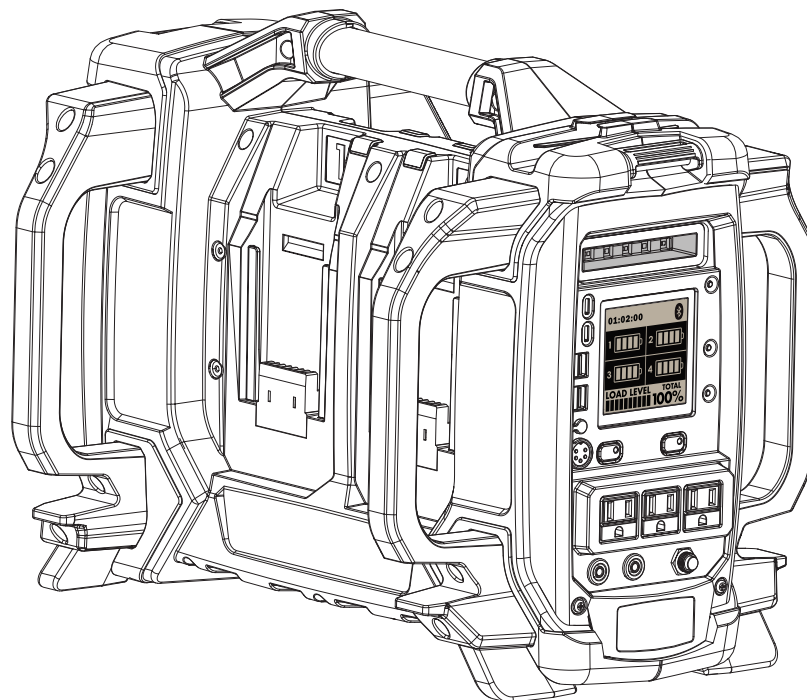


TECHTRONIC INDUSTRIES POWER EQUIPMENT

P.O. Box 1288, Anderson, SC 29622 ■ 1-800-525-2579 ■ www.ryobitools.com

995000821
10-11-21 (Rev:01)

The model number and manufacturing location will be found on a label attached to the product. Always mention this information in all communications regarding this product and when ordering parts.

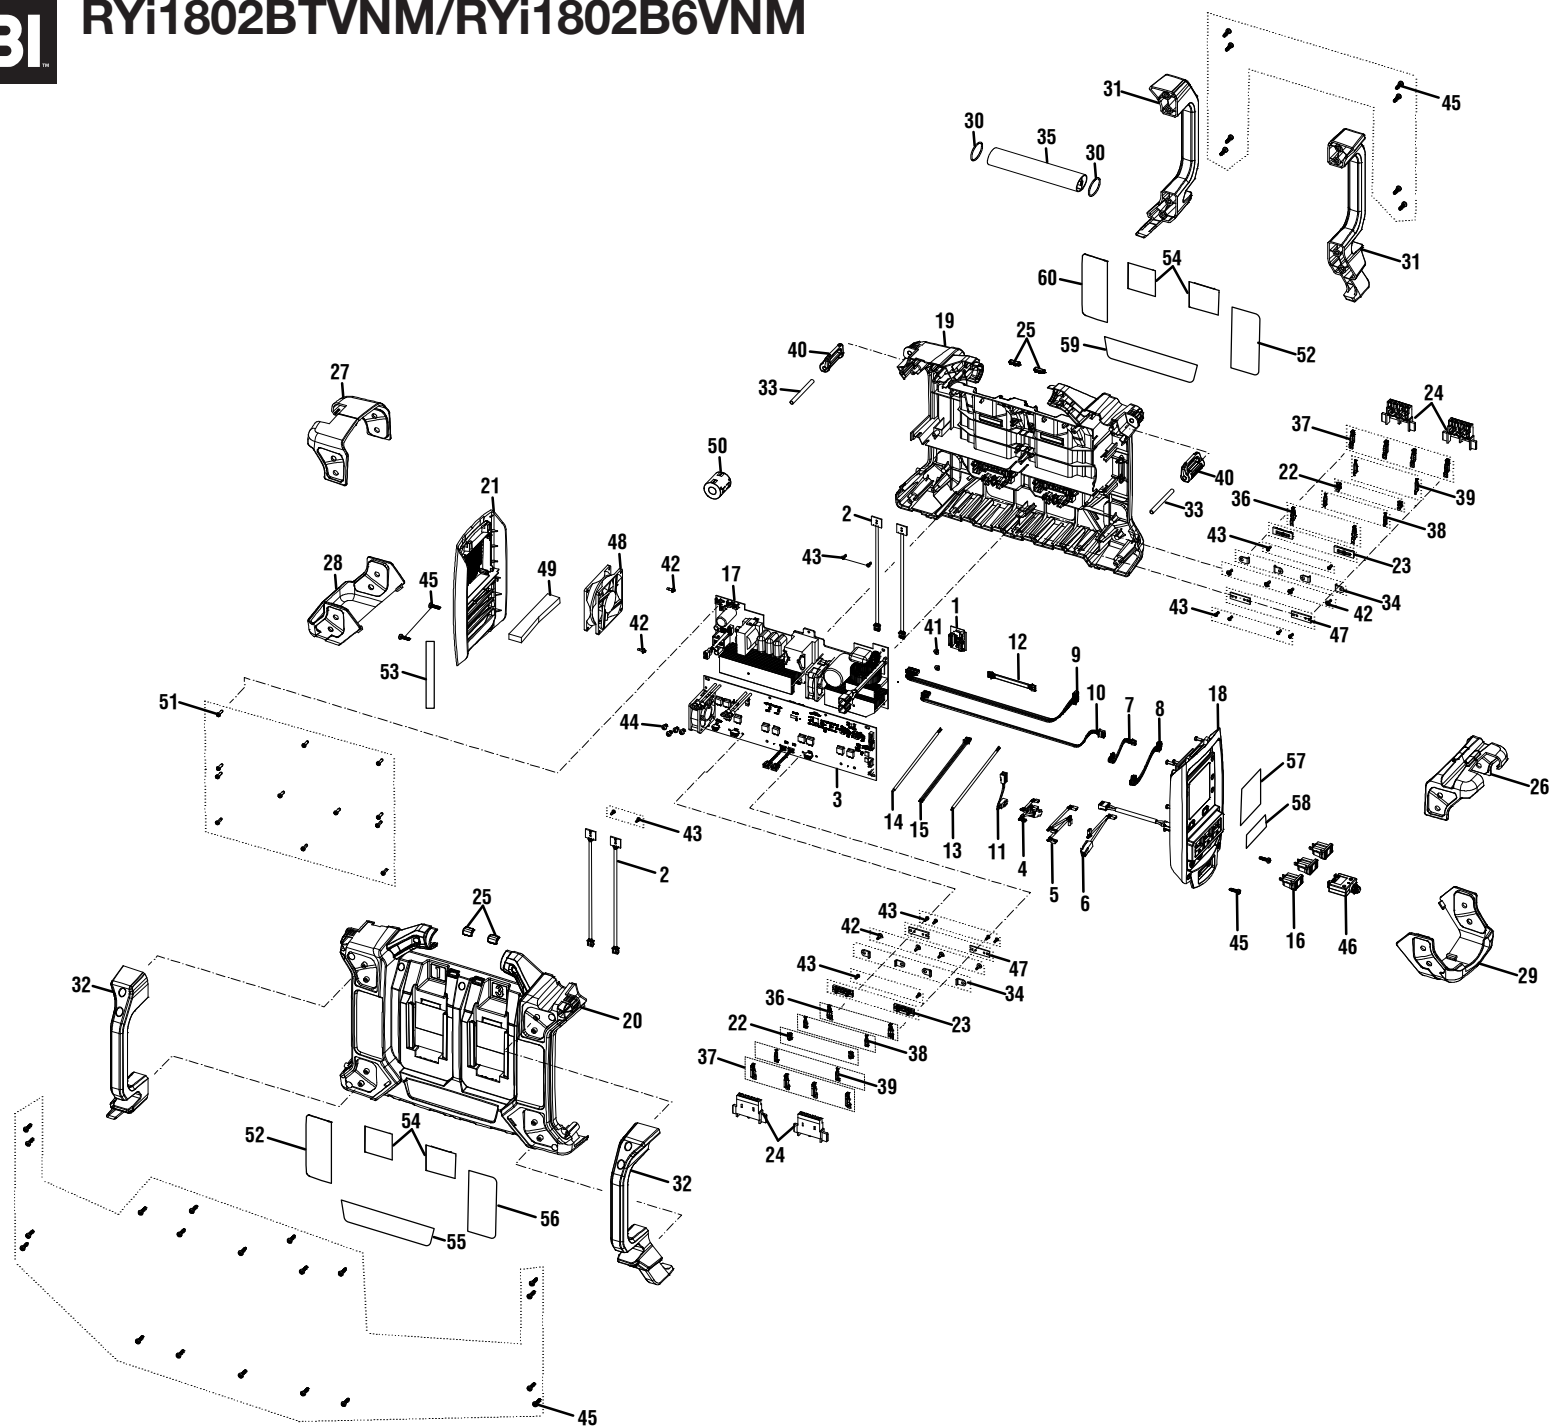



RYi1802BTVNM/RYi1802B6VNM

PARTS LIST

KEY NO.	PART NO.	DESCRIPTION	QTY.
1	280755001	Program Circuit Board Assembly	1
2	280850001	LED Circuit Board Assembly	4
3	280851001	Main Circuit Board Assembly	1
4	290361008	Output Assembly	2
5	290361009	Harness Circuit Breaker to Receptacle	1
6	290361010	Harness Parallel to Circuit Breaker	1
7	290361017	Controller Harness	1
8	290361018	Firmware Harness	1
9	290361019	Inverter Harness	1
10	290361020	Inverter to Controller Harness	1
11	290361021	BMS to Controller Harness	1
12	290361022	PH-5Y Female Harness	1
13	290361024	Negative Battery Cable	4
14	290361025	Positive Battery Cable	4
15	290361026	Battery Harness	4
16	290400029	120V Power Outlet Receptacle	3
17	290991040	1600W Inverter Circuit Board Assembly	1
18	310714067	Front Cover Assembly (Inc. Key Nos. 57-58)	1
19	524001019	Housing Cover (Right, Inc. Key Nos. 52, 54 & 59-60)	1
20	524003077	Housing Cover (Left, Inc. Key Nos. 52 & 54-56)	1
21	524012041	Rear Housing Cover (Inc. Key No. 53)	1
22	525361023	Contact Holder	4
23	525651003	Battery Cover Connector	4
24	525692003	Battery Contact Holder	4
25	529685003	LED Light Lens	4
26	529907007	Top Bumper (Front)	1
27	529907008	Top Bumper (Rear)	1
28	529907009	Bottom Bumper (Rear)	1
29	529907010	Bottom Bumper (Front)	1
30	561384020	O-Ring	2
31	561454011	Handle (Right)	2

KEY NO.	PART NO.	DESCRIPTION	QTY.
32	561454012	Handle (Left)	2
33	620599037	Strap Pin	2
34	638700046	Brush Skirt Clip	8
35	638701037	Handle Tube	1
36	638991001	Female Terminal	4
37	638991004	Battery Contact Plate Terminal	8
38	639504003	T2 Contact Strip (Upper)	4
39	639504004	T2 Contact Strip (Lower)	4
40	641802003	Strap Retainer	2
41	660200002	Screw (M2.3 x 6 mm)	2
42	660202001	Screw (M3 x 10 mm)	10
43	660203001	Screw (M3 x 8 mm, Pan Hd.)	16
44	660481028	Screw (M4 x 6 mm, Pan Hd.)	4
45	661403016	Screw (ST4.2 x 15 mm, Pan Hd.)	32
46	780350011	15A Circuit Breaker	1
47	860948003	Battery Connector Cover	4
48	890025005	Fan	1
49	980414042	Foam	1
50	890052002	Magnet Ring	1
51	661610009	Screw (M3.5 x 12 mm, T15 Torx Pan Hd.)	12
52	940779261	Charging Indicator Label	2
53	940310009	FCC Label	1
54	940911015	Battery Callout Label	4
55	940779262	RYOBI/Power Station Logo Label	1
56	940513037	Warning Label	1
57	940040056	Main Power label	1
58	940705414	Logo Label	1
59	940654440	Battery Warning Label	1
60	941588897	Data Label	1
	Not Shown:		
	995000819	Operator's Manual	

